



6mm 'D' Tower Block Foyer

B06-CS-101

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Foyer (B06-CS-101)

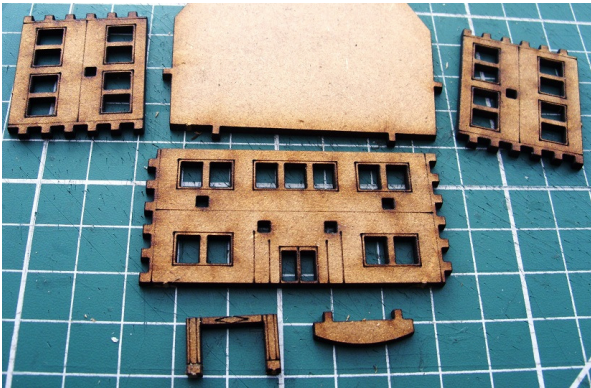


Remove the pieces shown above from the sprue. (The side walls are marked 'L' and 'R' respectively).



Glue the canopy and archway to the front of the building as shown above.

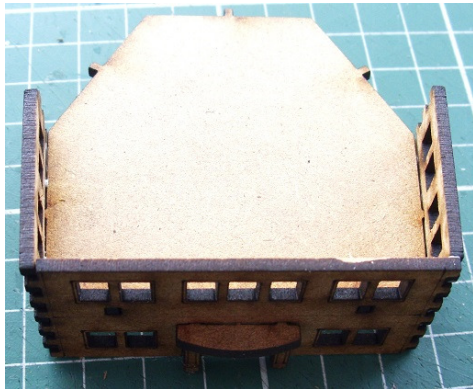

Glue the front and side walls to the main support as shown above. Allow to dry.

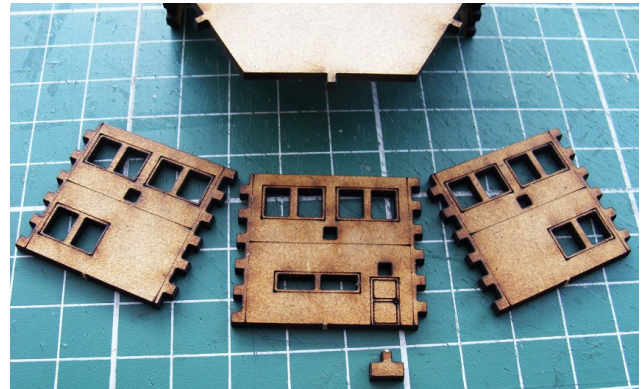

Remove the rear walls and rear canopy from the sprue.



Glue the canopy to the rear wall, then attach that wall and the two side walls to the main support.





6mm 'D' Tower Block Middle

B06-CS-151

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Mid-Section (B06-CS-151)

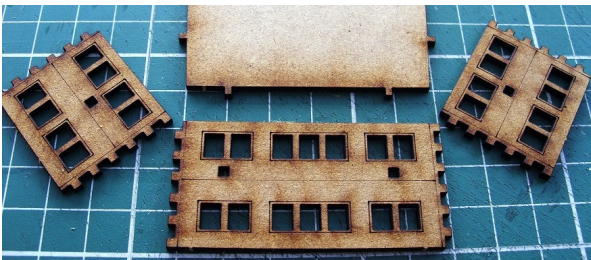

Remove the pieces shown above from the sprue. (The side walls are marked 'L' and 'R' respectively).




Glue the front and side walls to the main support as shown above. Allow to dry.

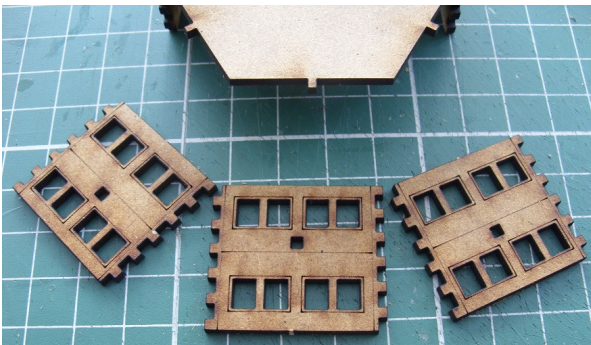

Remove the rear walls from the sprue. (The centre one is marked 'B').



Glue the walls into position. Allow to dry.

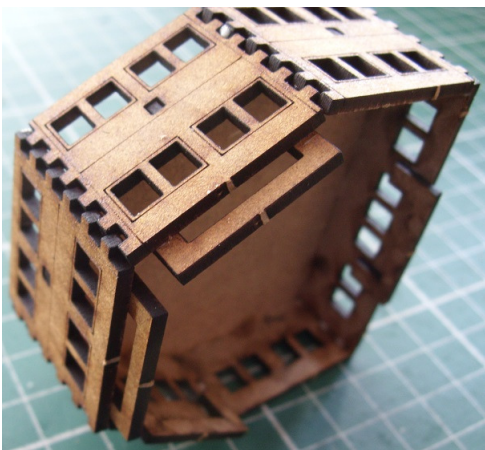

Glue the 'C' shaped supports to the bottom of the walls as shown above.





6mm 'D' Tower Block Roof

B06-CS-201

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Roof Section (B06-CS-201)

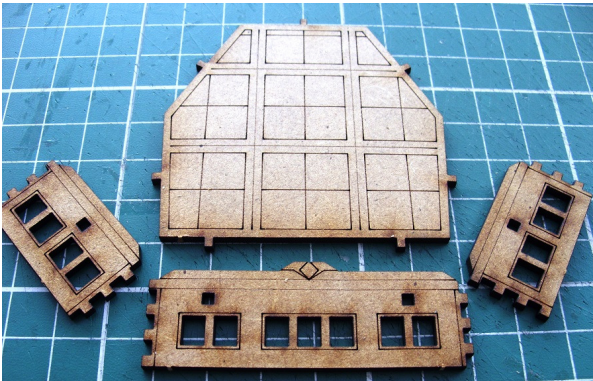


Remove the pieces shown above from the sprue. (The side walls are marked 'L' and 'R' respectively).

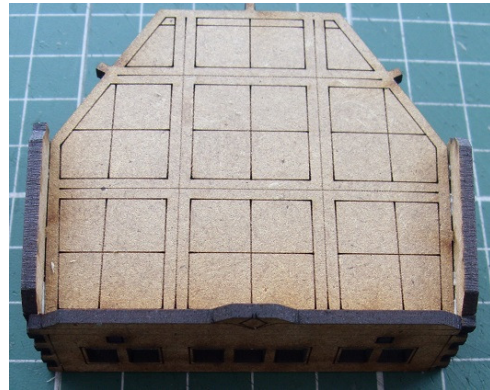

Glue the front and side walls to the roof piece as shown above. Allow to dry.

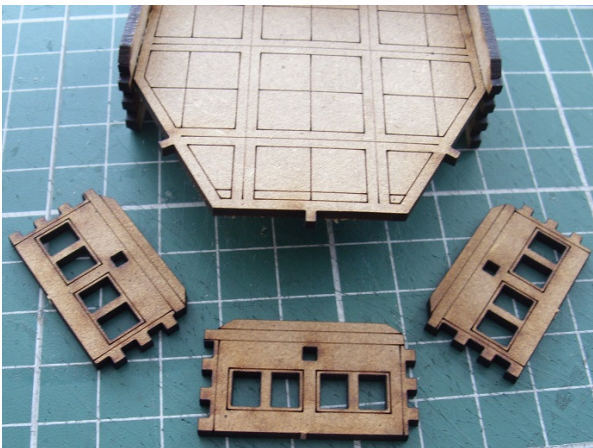

Remove the rear walls from the sprue. (The centre one is marked 'B'. and glue them into position.

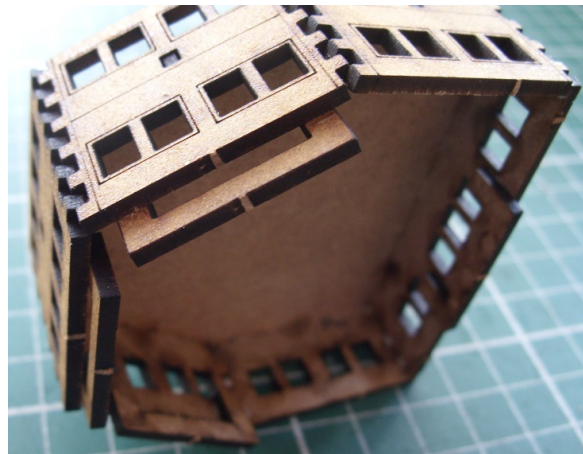

Glue the 'C' supports into position as per the example shown above.

