



6mm 4x3 Residential Foyer

B06-MW-103

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Foyer (B06-MW-103)

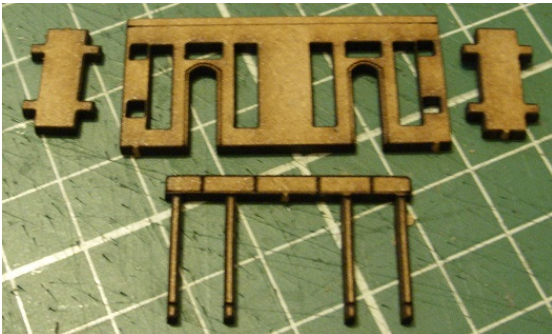


Start by removing the sections shown above (one set per doorway) from the sprue.



Glue them together as shown in the image above.



Glue each doorway to the **back** of the long sides, using the lugs/holes provided.

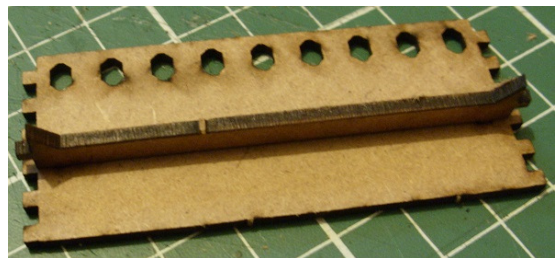

Glue the bracers to the **back** of the two short sides.



Glue the walls together to form a hollow box structure. Leave these to dry.



Glue the decorative columns into position on each end.



Then attach the columns to the front and back.





6mm 4x3 Residential Middle

B06-MW-152

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Mid-Section (B06-MW-152)

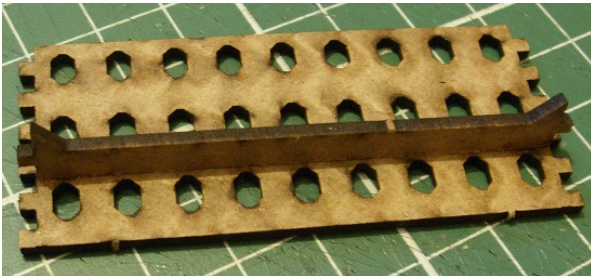


Remove the four walls and both bracers from the sprue. Glue the bracers to non-etched side of the two short walls as shown in the example above. Leave to dry.

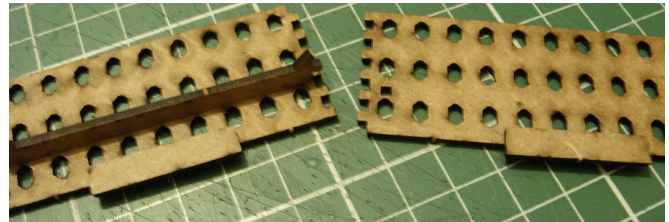

Now remove the four rectangles from the sprue. Each of these has a line etched across it. Apply glue to one side of the line only and attach it (as shown) to the back, centre **bottom** edge of each wall.

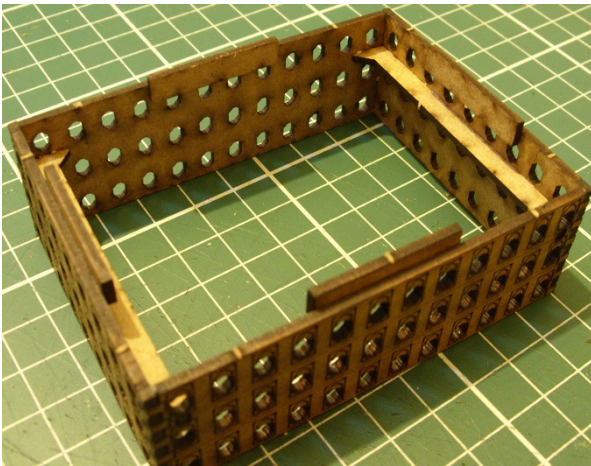

Once the bracers are dry, apply a little glue to the side lugs and glue the shorter walls in place as shown above. You should now have a hollow square structure. Leave it to dry. (Note in the picture above the model is upside down)

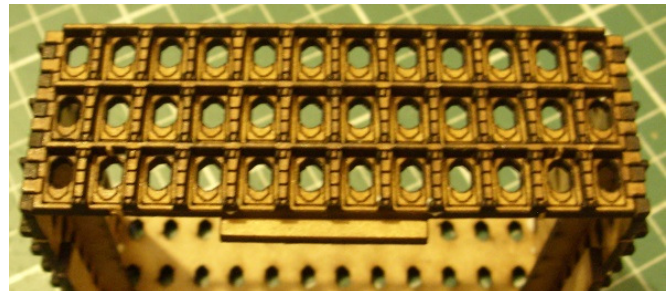

Finally glue the decorative columns into position between the windows on both the long and short sides.



6mm 4x3 Residential Roof

B06-MW-202

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Roof Section (B06-MW-202)

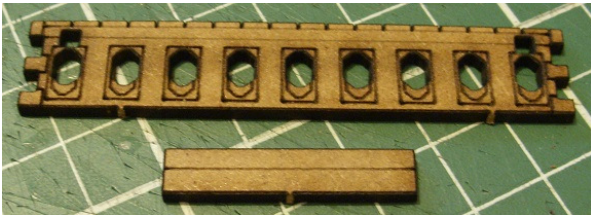

Remove the four walls and four supports from the sprue. Each of the supports has a line etched across it. Apply glue to one side of the line only and attach it to the back, centre **bottom** edge of each wall.



Work around the roof, gluing each wall into position using the lugs provided.



Finally glue the decorative columns into position between the windows,

