



6mm 4x3 Residential Foyer

B06-MW-103

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Start by removing the sections shown above (one set per doorway) from the sprue.

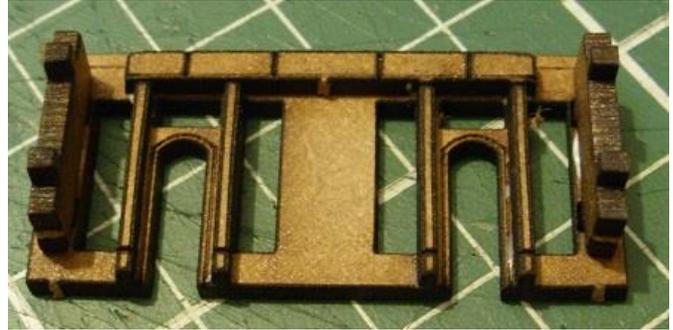

Glue them together as shown in the image above.



Glue each doorway to the **back** of the long sides, using the lugs/holes provided.

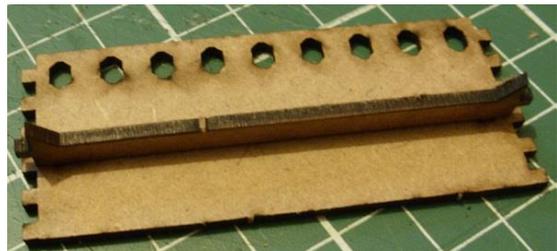

Glue the bracers to the **back** of the two short sides.



Glue the walls together to form a hollow box structure. Leave these to dry.



Glue the decorative columns into position on each end.



Then attach the columns to the front and back.





6mm 4x3 Residential Middle (Ruin)

B06-MW-154

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Remove the four walls and their decorative columns from the sprue.



Attach the walls to the "floor".



Work around the building attaching the decorative columns.

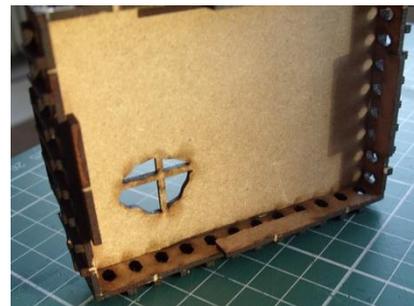

Glue the lugs under on the lower walls (see pic)



The completed level.

