



## 6mm 3x3 Residential Middle B06-MW-151

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


### Mid-Section (B06-MW-151)

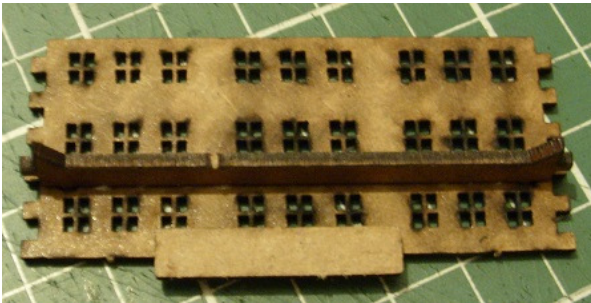

Remove the four walls and two bracers from the sprue. Glue the bracers to the non-etched side of two identical walls (checking the end lugs to be sure they are the same) as shown in the example above. Leave to dry.

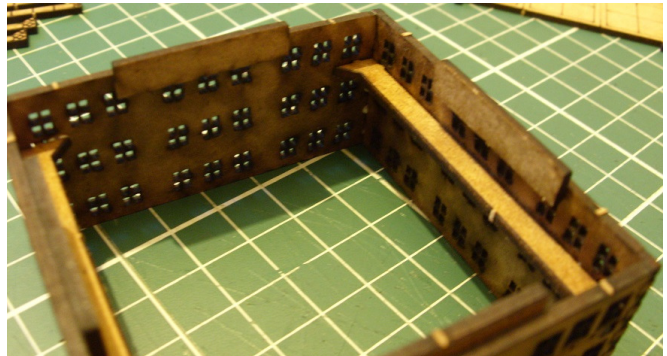

Once the bracers are dry, apply a little glue to the side lugs and glue the other walls in place as shown above. You should now have a hollow square structure. Leave it to dry.

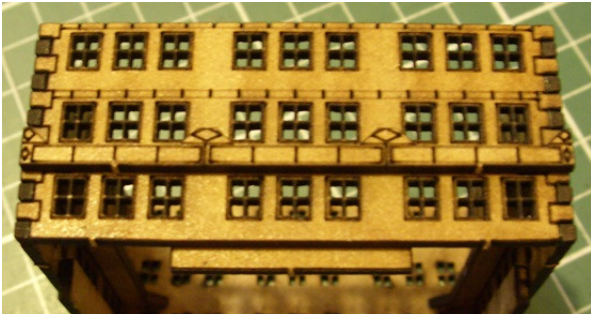

Finally glue the decorative strips just above the bottom windows, so they cover the lug-holes. Note – two strips are the same length as the walls and two overlap slightly to give a continuous band.

