



**BLOTZ**

# Future Gothic Components

## B08-FG-xxx

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue.

Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

These instructions cover all the components which form part of our Future Gothic range.

### Walls / Windows



Each wall / window is formed from two pieces as shown above.



Glue the base to the bottom of the wall / window.




To create multiple layers, simply slot the top window on to the bottom window.


### Tall Columns




Each large column is formed from the pieces shown above.

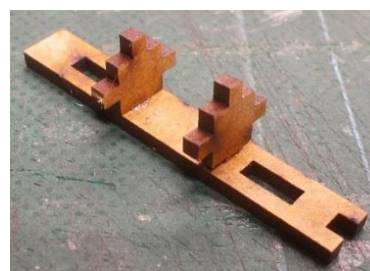

Glue two of the inner supports in place.

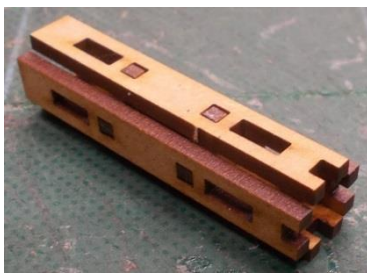

Attach the other three sides.

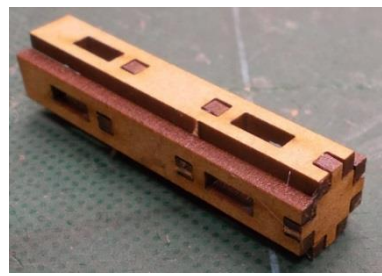


Glue the end cap in place.


### Short Columns



Each short column is formed from the pieces shown above.

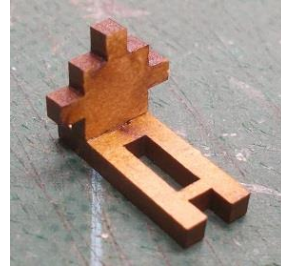

Glue one of the inner supports in place.

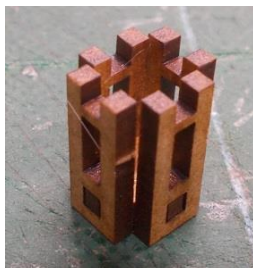

Attach the other three sides.




Glue the end cap in place.

### Edge Strips / Buttress




Take the strip / buttress...

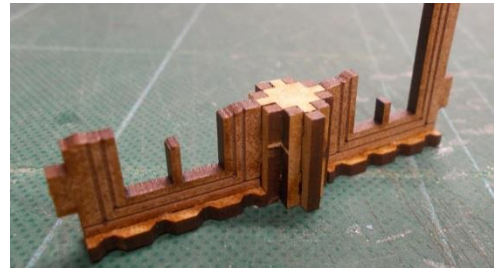

And slot it into the hole(s) in the column.

### Flying Buttress

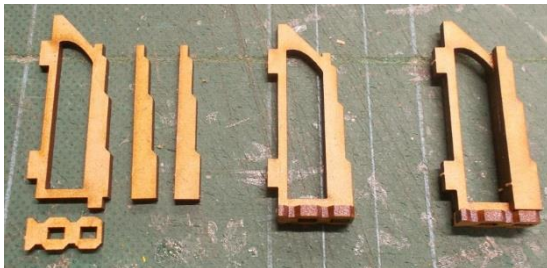

Take the four pieces shown on the left.  
Glue the base in position.  
Attach the side pieces.



Slot the flying buttress into the holes in the column.

## Upper Floors



Locate a suitable floor section.



Check that the ledges it will be glued to are clear of dried glue / debris.



Glue it into position on top of the ledges.