

BLOTZ

12 Turn Counter (Japanese)

B00-ACC-100


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

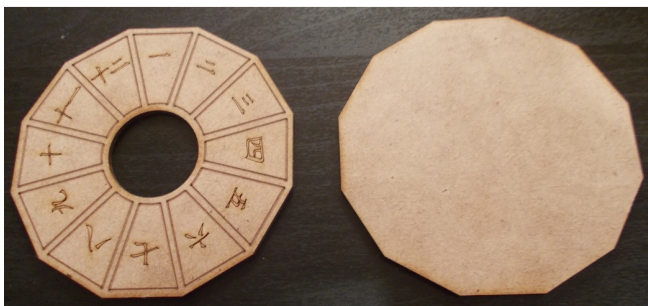

Remove the base and top plate from the sprue.



Glue them together, aligning the sides, ensuring you do not get any glue in the central hole.

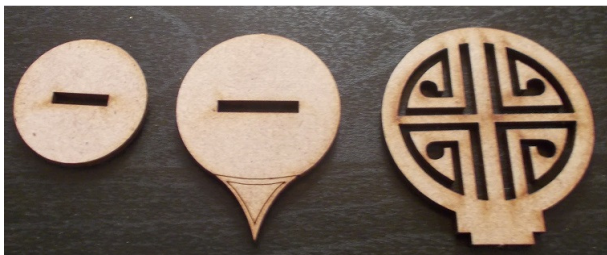

Take the three pieces of the pointer from the sprue.



Glue the smaller disk below the larger one, aligning the slots and then push the upright through to secure them in place.



Place (do not glue) the pointer to the base section.

1 一

5 五

9 九

2 二

6 六

10 十

3 三

7 七

11 十一

4 四

8 八

12 十二