



Box Insert #1


B00-ACC-400

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

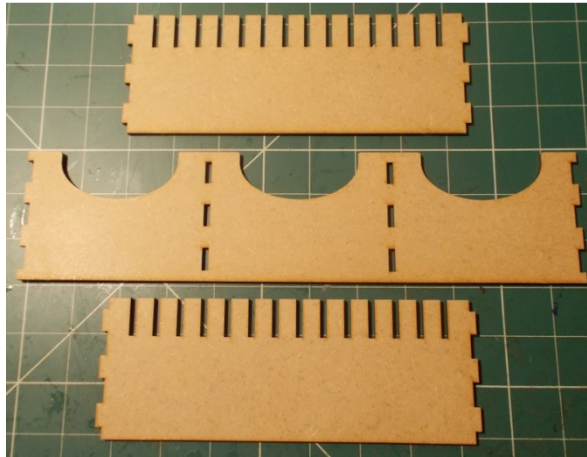

Take one long edge piece and two of the shorter sides from the sprue.

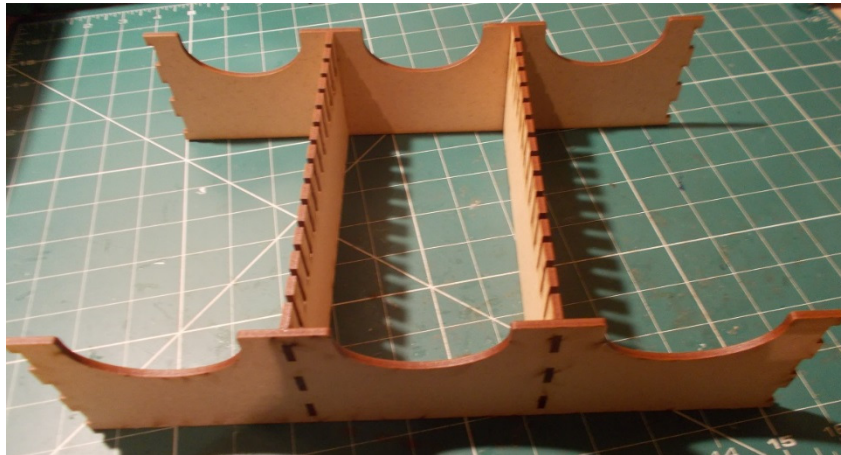

Glue the short sections into the notches cut in the long piece, then add the second long side.
(see pic above)

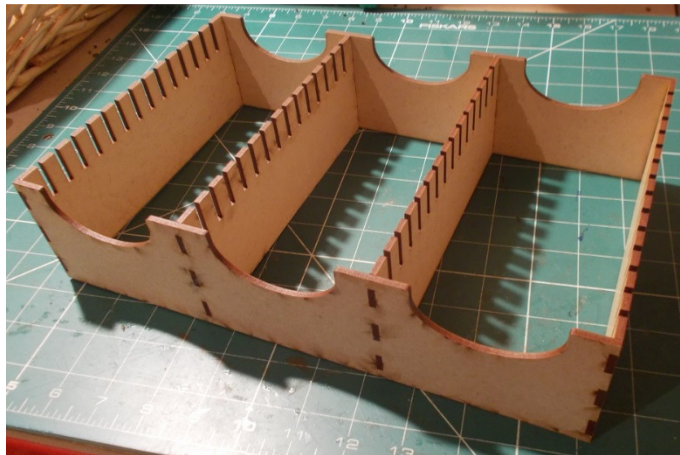

Glue the other two short pieces into position to form the other two sides of the insert.
Once the glue is dry, you can place the insert into your box and add the dividers.



Card Slide for Box Insert #1


B00-ACC-402

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

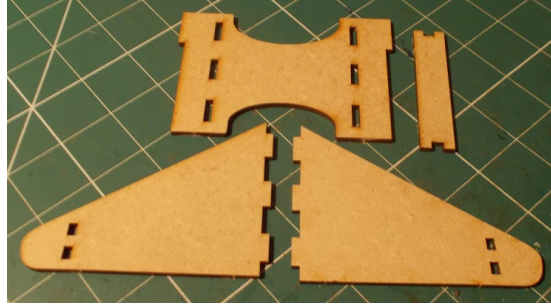

Take all the pieces from the sprue.

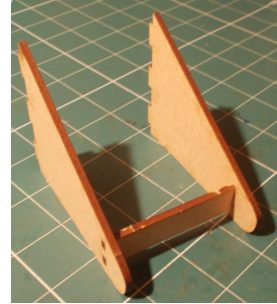

Glue the thin spacer-bar between the two slopes as shown above.

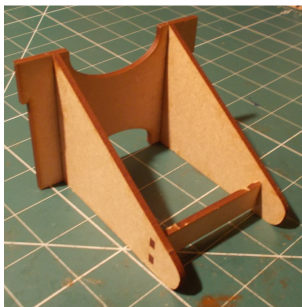

Glue the slopes to the divider.



The finished card slope.