

3-



3 Dial Block (suitable for Kings of War)

B00-RT-240


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

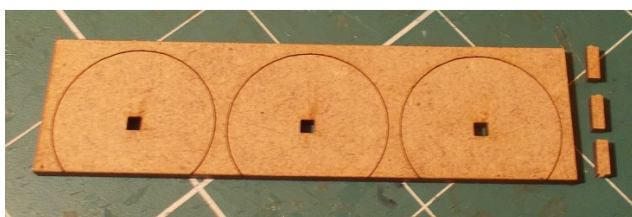

Remove the base and three "axles" from the sprue.

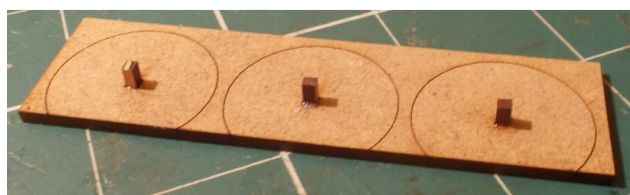


Glue the axles into position, removing any excess glue from around them.

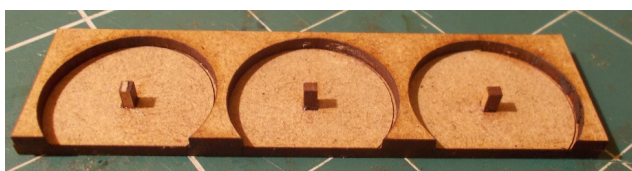

Glue the middle section into place, again ensuring no excess glue extends into each of the three openings.



You may find it easier to spray the dials once everything else has been removed from the sprue.

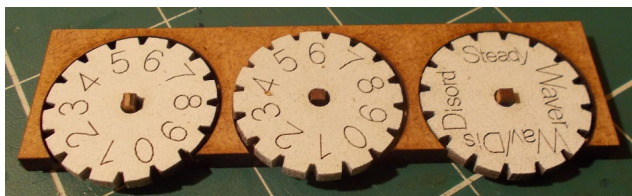

Carefully trim the sprue point on the dials (by the '8' or 'Disord') then place (do not glue) them over the axles in the order shown above (i.e. numbers, numbers, words)



Carefully glue the top plate into position (making sure no glue gets onto the dials), aligning the axles with the holes provided as shown above. Leave to dry.

Note: Once the glue has dried, you may find that the dials are initially a bit stiff to move if you have accidentally got some glue on them. Keep gently turning the dial and it will release, becoming easier to move.