



**BLOTZ**

## Starship Base (Large)

### B00-RTD-101

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


**Please Note:** For our build we removed all the pieces for the starship base from the sprue except for the dials and squadron tags. We then sprayed these (on the sprue) with a white spray paint from about 30cm away.

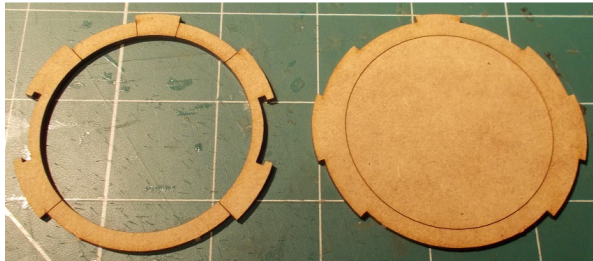


Remove the two base pieces from the sprue.




Glue them together as shown so that the fire arcs align.

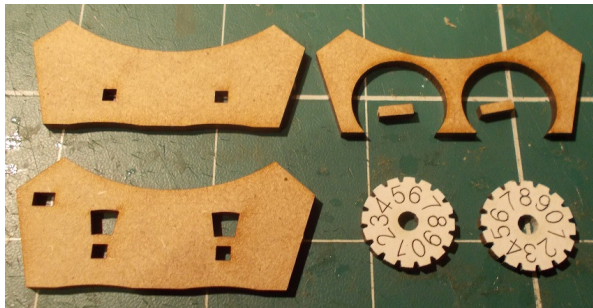


The damage counter is formed from the pieces shown above.

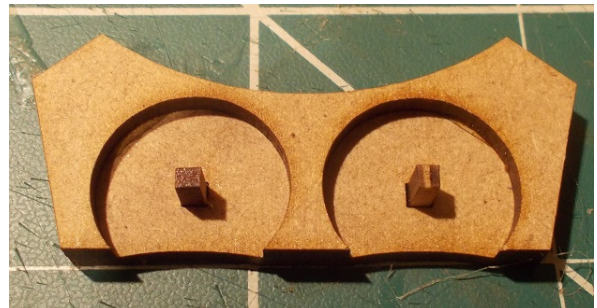

Glue the axles to the back plate, then glue the surround in place.

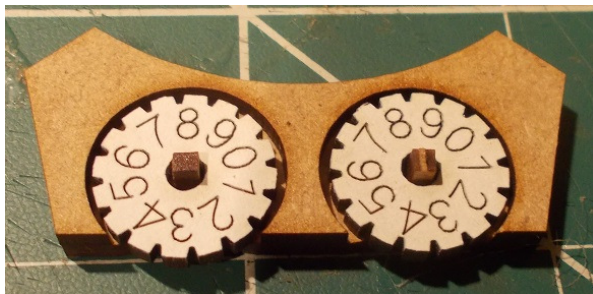

Place (do not glue) the dials onto the axle.

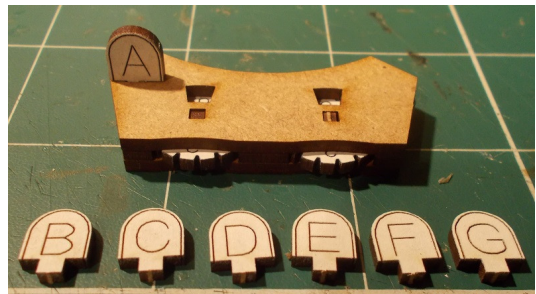

Glue the top plate into place, being careful not to get any glue on the dial.

Place (do not glue) your chosen squadron tag into position.