

# Generic Counter (00-99)

## B00-RT-217

**BLOTZ**

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Carefully remove the two axles from the centre of the dials. **DO NOT** throw these away.

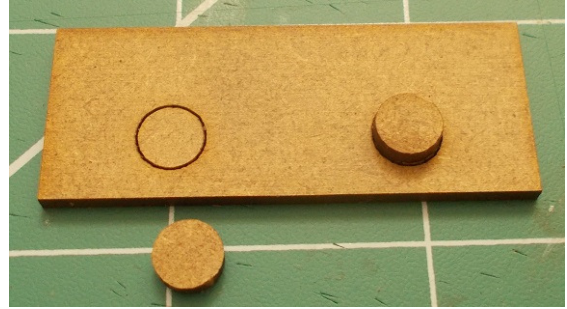

Glue the two axles to the back plate, positioning them inside the two circles etched into it.




Glue the central section into place. Allow this whole assembly to fully dry before proceeding.

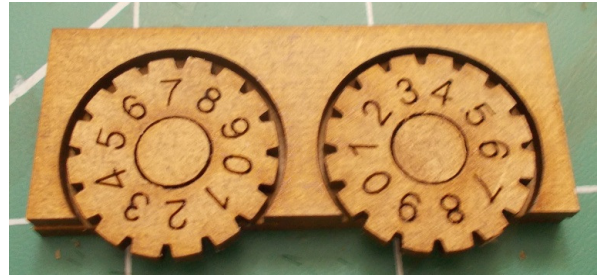

Place the dials over their axles as shown.



Finally glue the top plate into position, ensuring that no glue gets onto the dials.

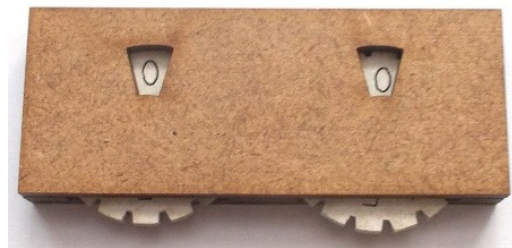

This example had its dials sprayed white before assembly, allowing the numbers to be seen more clearly.