



# 10mm 3x3 Tower Block Roof

## B10-CS-310

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


### Roof Section

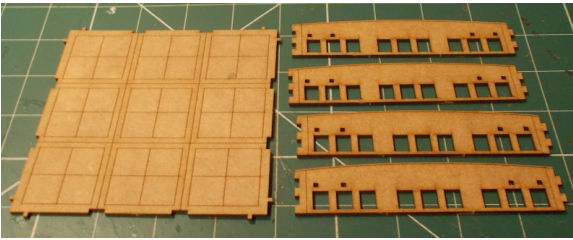


Remove the base and four walls from the sprue.

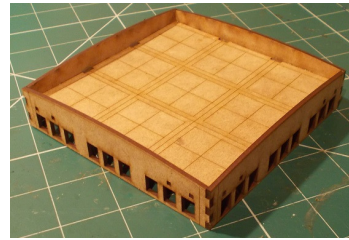

Glue the walls to the base, aligning them using the holes / lugs provided.

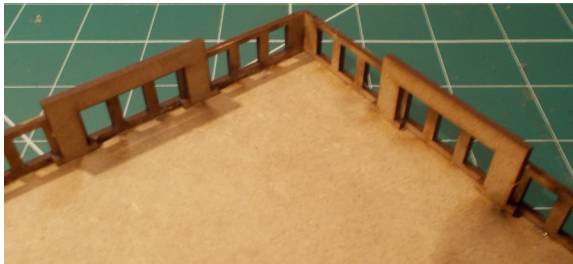

Flip the roof assembly over and glue the four support pieces into place as shown.

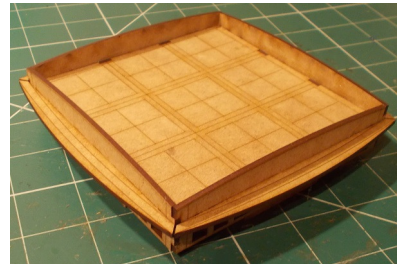

Put it back the right way up and attach the four sunshade pieces.