



B10-MW-001

10mm 3x2 Residential



Designed and made in the UK.

This is a model kit and is not intended for persons under 14 years old.

This kit consists of:

B10-MW-100: Foyer (2 sheets)

B10-MW-150: Middle (1 sheet)

B10-MW-200: Roof (1 sheet)

Blotz

90 Fullers Avenue

Cricklade

SN6 6EU

info@blotz.co.uk

www.blotz.co.uk



10mm 3x2 Residential Foyer

B10-MW-100

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

Foyer (B10-MW-100)

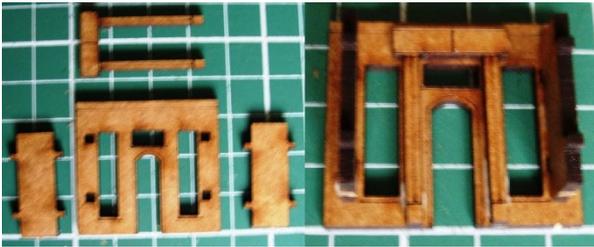

Start by removing the sections shown above (left) from the sprue. There are enough parts to create both doorway sections.

Glue them together as shown in the image on the right.

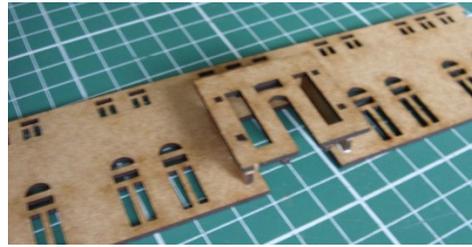

Glue each doorway to the **back** of the long sides, using the lugs/holes provided.



At the same time, glue a triangular bracer to the back of the long sides at each end. Leave these to dry.



Glue the shorter end walls into place to give a hollow rectangle. Once this is dry, glue the decorative columns and balconies into position.



10mm 3x2 Residential Middle

B10-MW-150

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Mid-Section (B10-MW-150)



Remove the four walls and four triangular corner bracers from the sprue. Glue the triangles to non-etched side of the two long walls as shown in the example above. Leave to dry.

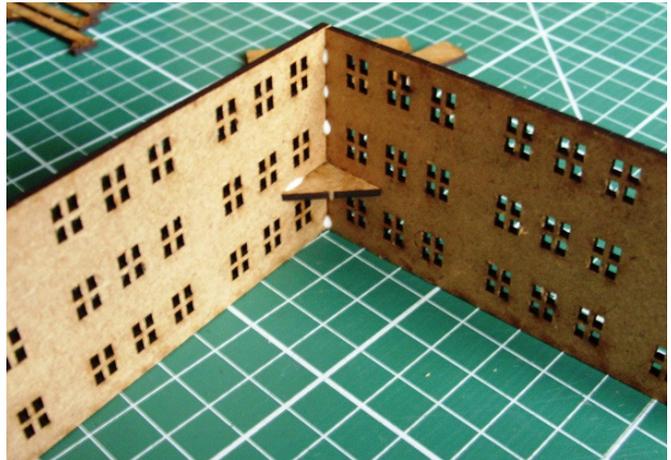

Once the bracers are dry, apply a little glue to the side lugs and glue the shorter walls in place as shown above. You should now have a hollow square structure. Leave it to dry.

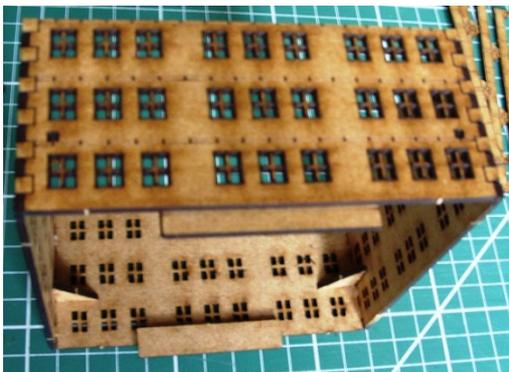

Now remove the four rectangles from the sprue. Each of these has a line etched across it. Apply glue to one side of the line only and attach it (as shown) to the centre **bottom** edge of each wall.



Finally glue the balconies into position.