



# 15mm Office Block

## B15-CS-002


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

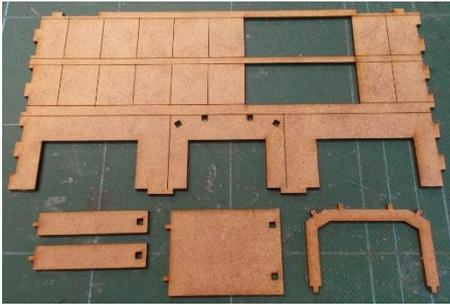

Start by removing the front wall and awning sections (shown above) from the sprue.



Glue the awning together as shown above.



Attach it to the front wall.



Take the other three walls and the brackets.



Attach the side walls, then glue the brackets to the corners (being careful not to get glue in their larger holes)



Glue the whole assembly to the base.



Take the inner walls.



Glue them into place behind the openings.



The etched lines on the inner walls will align with the edges of the openings.



Take the window pieces.



Glue these behind the openings in the walls.



As with the inner walls, the etched lines will align with the edges of the openings.



Take the decorative strips.



Glue each one in place – it aligns with the left hand edge and will extend out by 2mm at the right hand edge.



The completed ground floor.




Take the four wall pieces from the sprue.



Glue each in turn to the roof piece as shown above.




Once done, turn the roof assembly upside down.

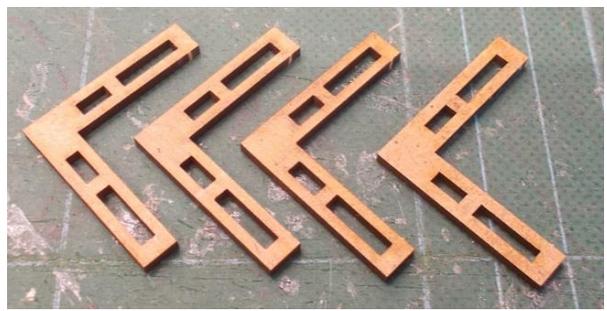

Take the four corner supports.



Glue each one to a corner.

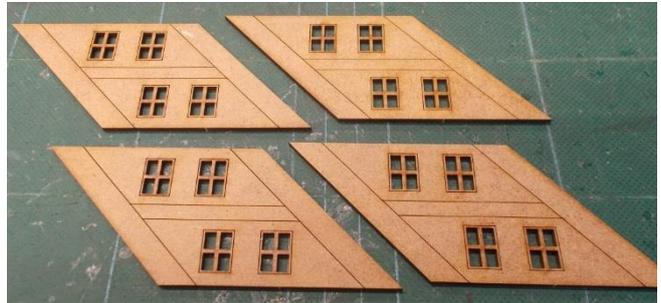

Take the sloped window pieces.



Glue them behind their openings in the walls.



The etched lines will align with the edges of the openings.



Take the decorative strips



Glue the flat ones to hide the roof lugs. Glue the others at the base of the model so they align with the corner supports.



The finished model.