



15mm Fast Food Outlet

B15-CS-005


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

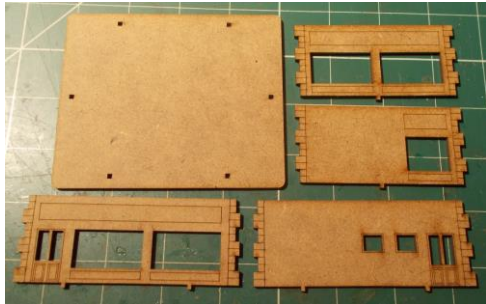


Remove the four wall sections and base from the sprue.



Glue them together as shown above.
Leave to dry.

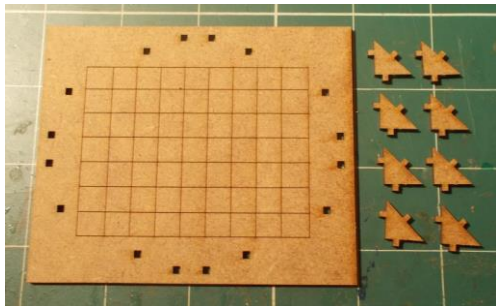

Take the roof and supports from the sprue.

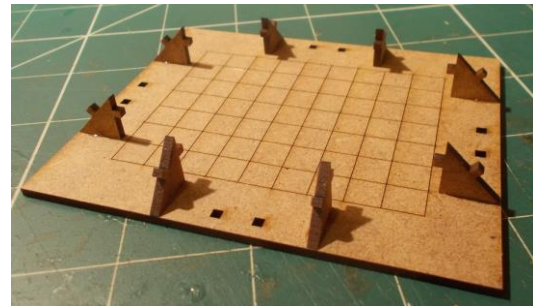


Glue the supports around the roof as shown.



The roof well uses the pieces shown above.




Glue the short pieces into place, then attach the longer pieces.

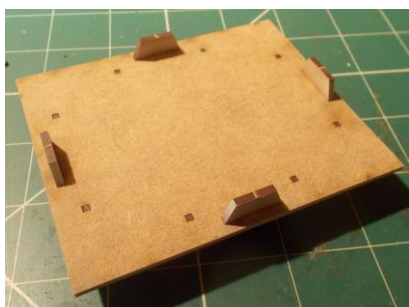

Turn the roof over and glue the four bracers into place.



The four tile pieces. Before attaching these we recommend undercoating the model. (see below)

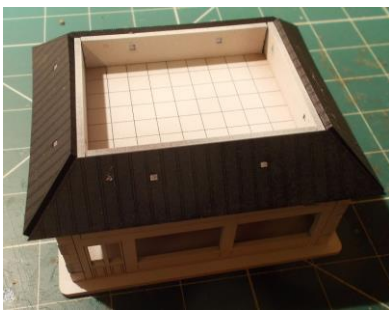

The tile sections in position.



The finished model.

Painting Guidelines

We undercoated the tile sections black (car undercoat spray) and the rest of the model white (car undercoat spray)

The panels and brickwork were then painted red (DIY / Emulsion paint) and the base was painted grey (DIY / Emulsion paint)