



15mm Car Park

B15-CS-006


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

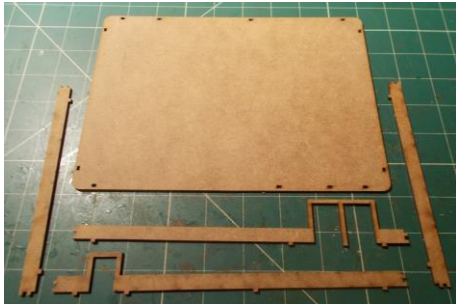

Remove the four lower wall sections and base from the sprue.

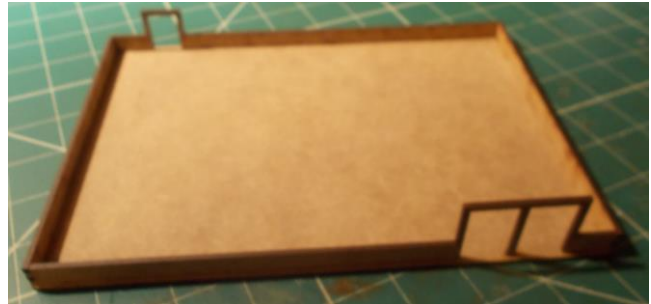


Glue them together as shown above.
Leave to dry.



Each support is formed from the two pieces on the left. Slot them together as shown on the right.




Glue the supports to the underside of the upper level's floor.

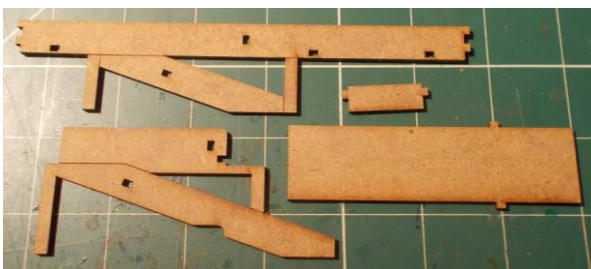

Each end of the upper level is formed from the pieces shown here.



Glue the short piece into place first.

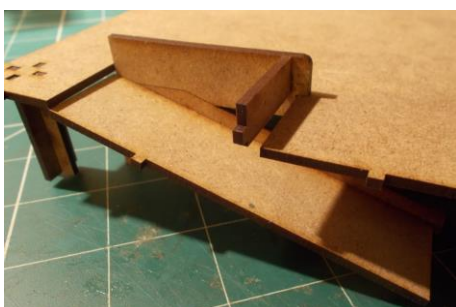

Attach the ramp and small wall.



Add the outer section.



The completed upper floor.



The finished model.