



15mm Middle Eastern Building #1

B15-MW-001


Please read these instructions fully before starting construction.
PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


Middle Eastern Building #1 (B15-MW-001)

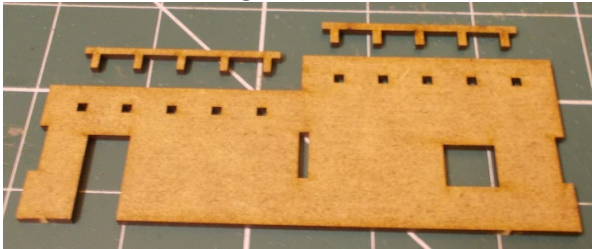


Remove each wall from the sprue along with the relevant number of support pieces.

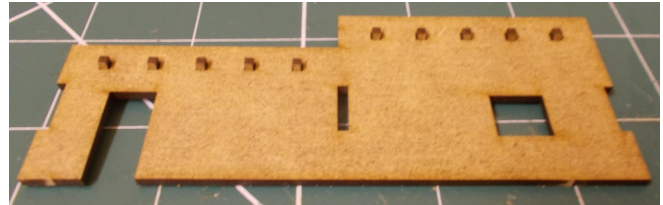


Glue the support pieces to the rear of the wall so that they stick out of the front (as shown above).

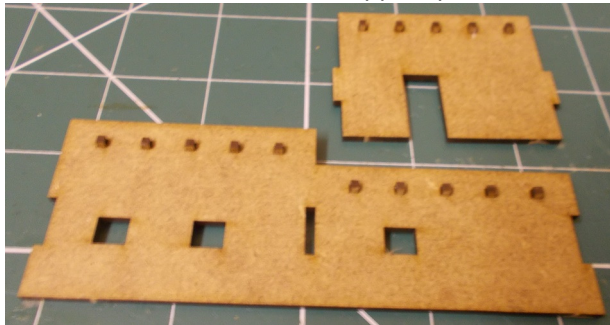


Take the rear wall and central wall..

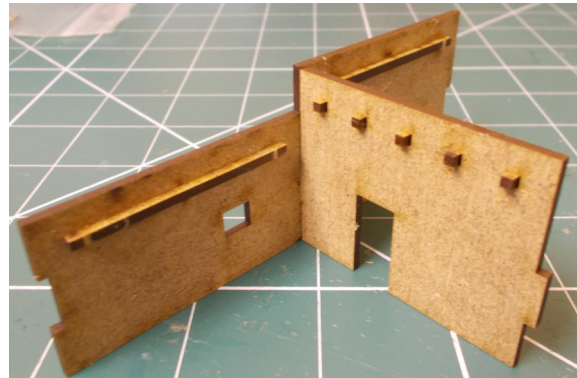


.. and glue them together as shown using the lugs / holes provided.

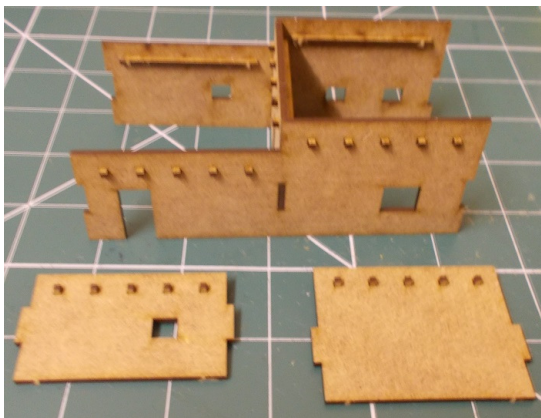


Attach the front wall

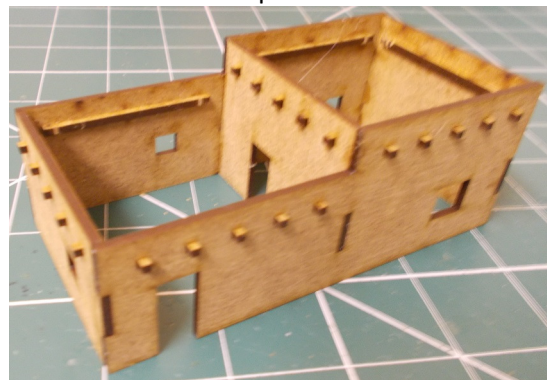

Followed by the two end walls.

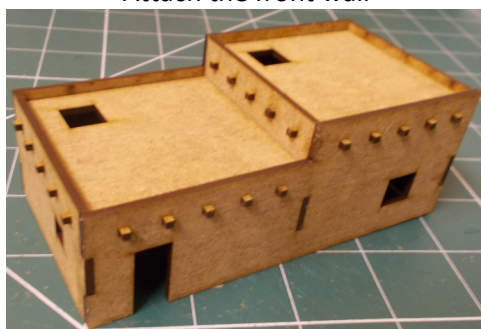

Place the roof pieces into position (do not glue)

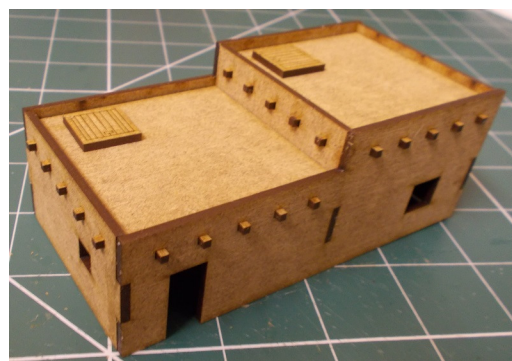

If required add the trapdoors.