



# 15mm Middle Eastern Building #3

## B15-MW-003


Please read these instructions fully before starting construction.  
PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


### Middle Eastern Building #3 (B15-MW-003)

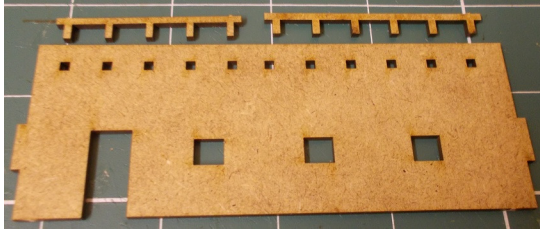


For each section of the building, remove it from the sprue along with the relevant number of roof supports.




Glue the supports to the back of the section.

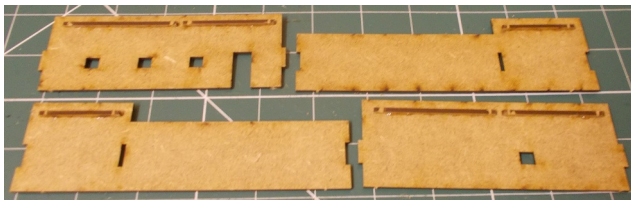


All the sections with their roof supports attached.

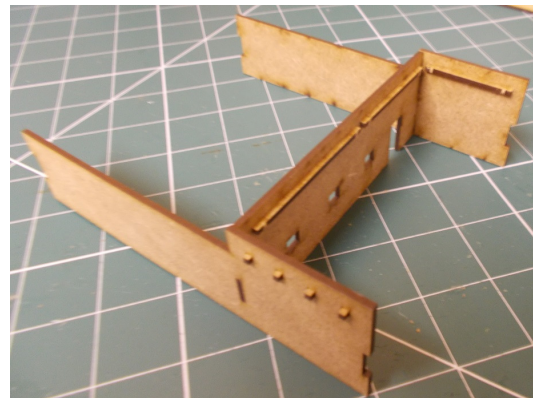


Glue the door section to the two long outer walls as shown above.

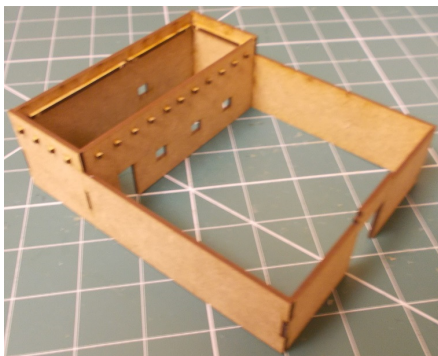


Attach the rear wall and gateway sections.

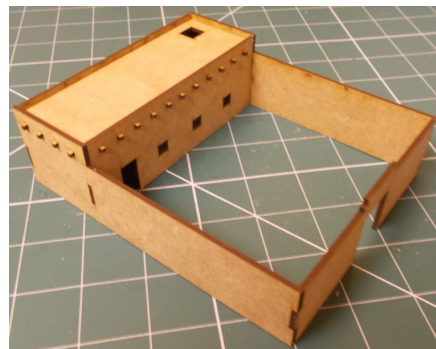

Add the roof (do not glue).

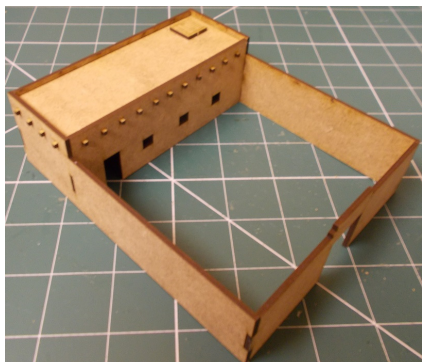

If required add the trapdoor.

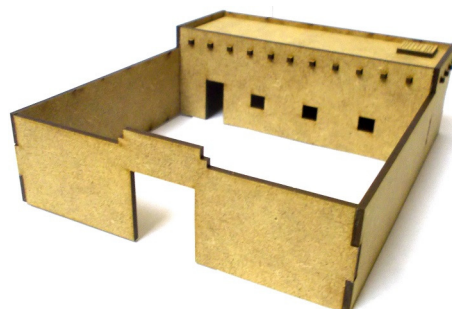

The finished building.