



# 15mm Middle Eastern Building #8

## B15-ME-008


Please read these instructions fully before starting construction.  
PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


### Middle Eastern Building #8 (B15-MW-008)

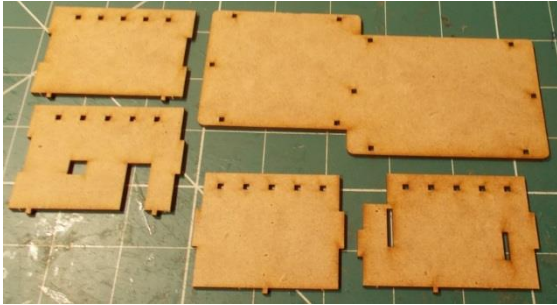


Remove the four tall walls and the base from the sprue.

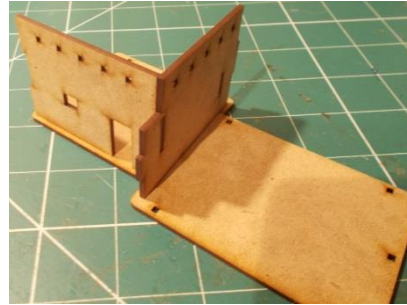

Glue the front and centre wall to the base as shown.

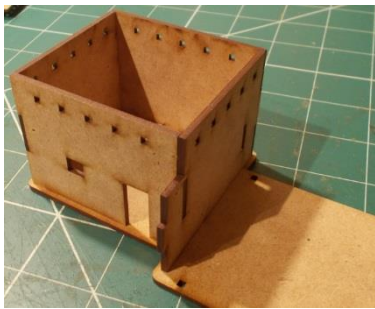

The add the side and rear walls.

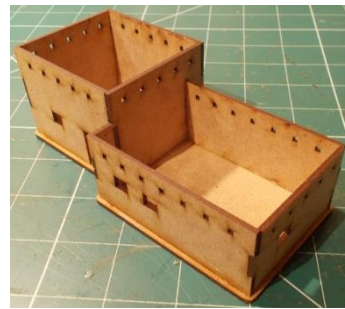

Attach the three lower walls.




Remove the seven roof supports and the door from the sprue.



Glue the door behind the opening and attach the supports by pushing the lugs through the holes in the walls so that they stick out as shown above.



Glue the trapdoor to the roof sections and place (do not glue) them on top of the roof supports.

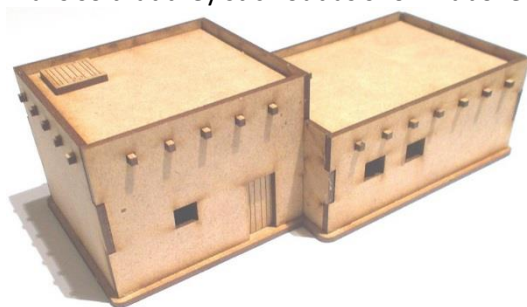

The finished building.