



BLOTZ

15mm Jersey Barriers

B15-WF-106

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Take the three uprights and central bar as shown above from the sprue.

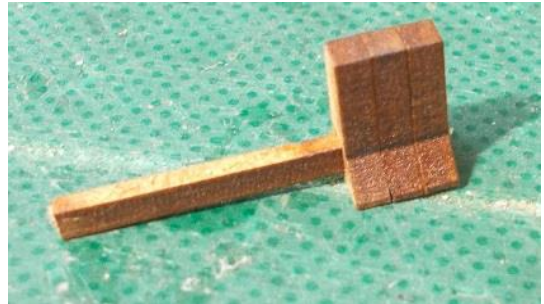

Slide the uprights onto the bar, gluing them at one end (see pic)




Take the four "gap" pieces and one more upright.



Glue two of the "gap" pieces onto the bar, followed by the upright and then the other two "gap" pieces.



Finally add the last three uprights.

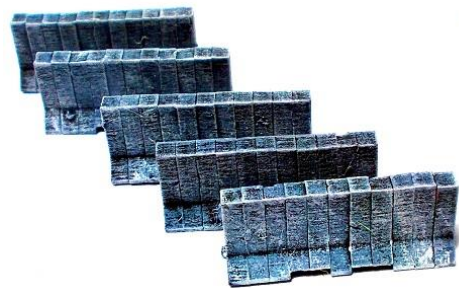

The finished items.

Painting

After construction we sprayed the models with a matt black car primer aerosol, then applied a heavy drybrush of a dark blue/grey colour emulsion.

After that had dried we applied a lighter drybrush of a pale grey colour, then followed this by a very light drybrush of an almost white emulsion.

All our emulsion paints are DIY store colour-test pots.