




15mm Terrace - B15-WW2-100

Please read these instructions fully before starting construction.
PVA or equivalent glue will be required to stick sections together.
Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

When gluing pieces to the base sections (G and L), ensure you do not get glue into the corner holes (see picture) as these are used to hold the levels together.

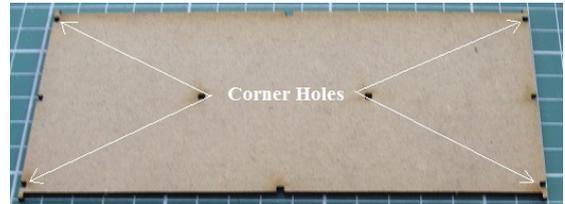

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

Ground Floor



Remove the following sections from the sprue: Base (G)(x1), long inner walls (I)(x2), short inner walls (J)(x2).



Apply glue to lower edges and to the back of the end lugs of all the wall sections. Stick to the base so the lugs on the bottom of the walls sit within the spaces provided on the base, with the etched detail on the walls facing outwards.



Remove two partition wall sections (N) from the sprue, apply glue to both ends and the bottom, then attach to the points as shown.




Remove long outer walls (A)(x2) from the sprue. Apply glue to unpainted side and stick to long inner walls.



Remove short outer walls (D)(x2) from sprue and apply glue to unpainted side. Stick to short inner walls.

Put the lower floor to one side and allow glue to dry.

Upper Floor

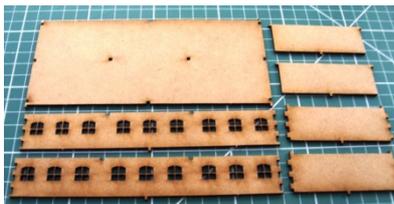

Remove the following sections from the sprue: Base (G)(x1), long inner walls (H) (x2), short inner walls (J)(x2) and partition walls (N)(x2).




Attach these together in the same way as the ground floor.



Take long outer walls (B)(x2) and short outer walls (C)(x2) and glue to upper floor shell. Leave to dry.

Top Floor / Attic Space

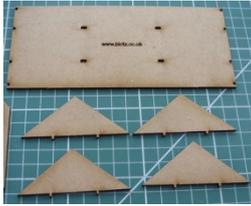

Remove the following sections from the sprue: Base (L)(x1), partitions (O)(x4).



Glue two partitions back to back and attach to the holes in the base. Repeat with the other pair of partitions.




Take the inner ends (M)(x2) and outer ends (F)(x2). Glue one inner end to the unpainted side of one outer end. The bottom of the lugs on the inner should touch the bottom of the outer. Repeat for the other inner/outer pieces.



Glue the ends to the roof base.

Roof Sections

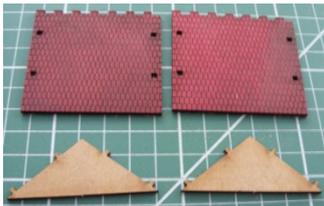

Take H(x2) and R(x2).



Glue together as shown. Also pop a bit of glue along the inside of the lugs on the ridge line to provide a bit of extra grip.



Repeat this process for the remaining (H) and (R) sections, so you end up with three roof pieces

Chimneys



Take three chimney sections E.
Glue together as shown.



Repeat for the other chimney pieces so you get 3 chimneys.



Glue each chimney to the apex of a roof section.

Embellishments

Carefully remove the all the window sills (Q) and arches (P) from the sprue.



Glue into position as shown.

Once all the glue on all sections is completely dry, they can be stacked together and will stay in position due to the lugs in the corners of the lower and upper floors. Initially these connections will be quite tight, but once you have assembled and parted these sections a few times, it will become much easier.