



**BLOTZ**

## 15mm Bus Shelters

**B15-ACC-004**


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

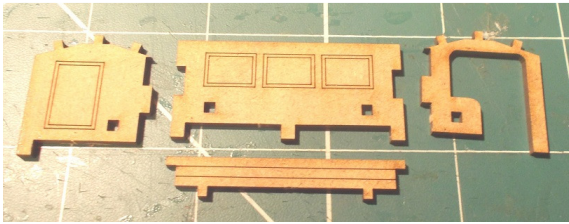

The body of each shelter is formed from the pieces shown above.



Attach the seat to the back wall – on either side depending if you want the advertising boards on the inside or outside of the shelter.



Attach the two end walls.



Add a wide roof piece (see above)



Then add the thin roof section of the centre of the roof, followed by a second wide roof piece.