



20mm Bus Shelters

B20-ACC-004

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Take the back wall and see (as shown above) from the sprue.

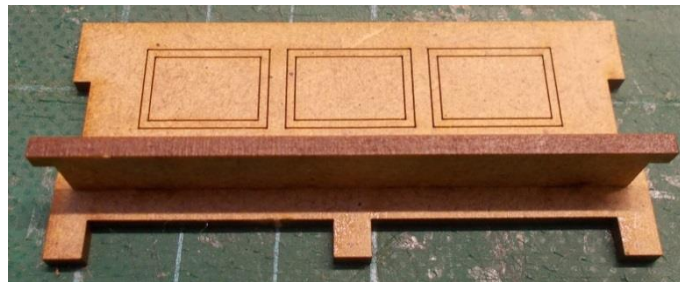

Attach the seat to the back wall – on either side depending if you want the advertising boards on the inside or outside of the shelter.



Attach the two end walls.



Remove the roof sections from the sprue (see above)



Starting with the one at the back, glue each into position.