



# Russian House #1 (20mm / 28mm kits)

## B20-EE-001 / B28-EE-001

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: [www.blotz.co.uk](http://www.blotz.co.uk)

The illustrations shown are the 20mm kit, but the instructions for the 28mm kit are identical.

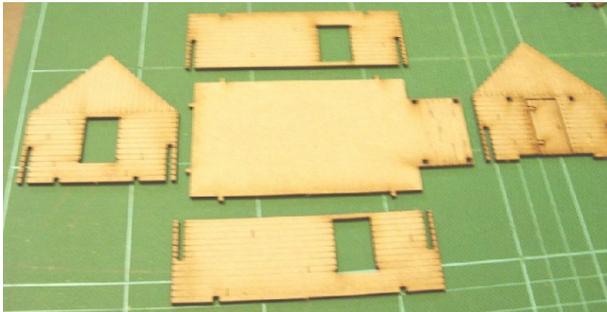


Remove the base, side walls and end walls from the sprue.

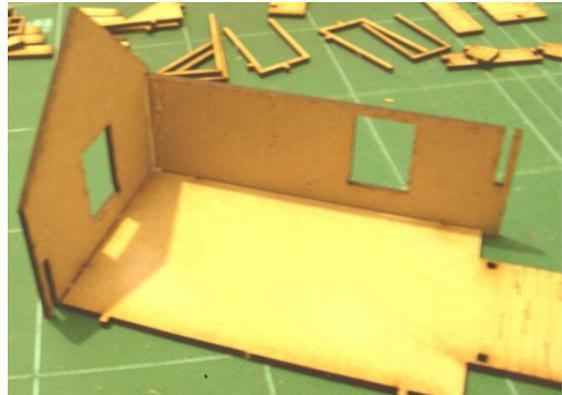

Slide the two walls and two ends together using the slots provided. Secure with a little glue.




Sit the structure over the base, positioned using the lugs provided and glue into position.

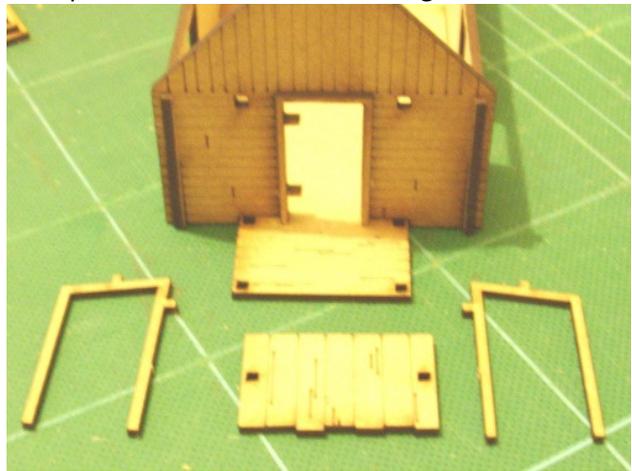

Remove the porch supports and roof from the sprue.



Glue the supports into position (using the holes provided), then glue the porch roof into place.

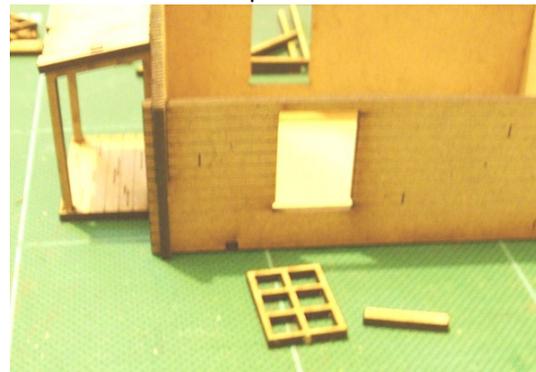


For each window space, remove the window and windowsill from the sprue.



Glue the windowsill into place, so the inside edge is flush to the fall and it protrudes slightly from the outer wall. Glue the window into place and then add a shutter on each side.



Glue the supports to one side of the roof, then attach the other side. Leave to dry.

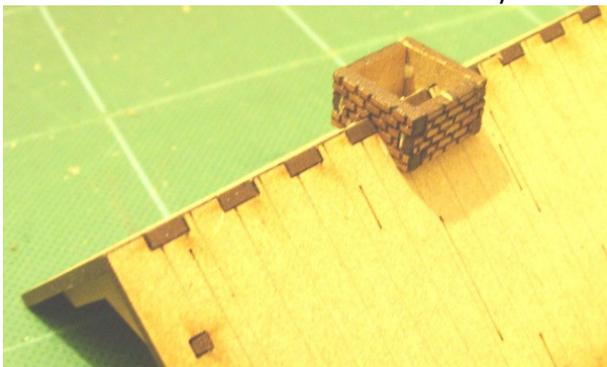


Glue onto the roof (Most Russian houses seem to have actually had the chimney at one end rather than in the middle).



Glue into place on the side of the building.



Remove the two roof pieces and two roof supports from the sprue.

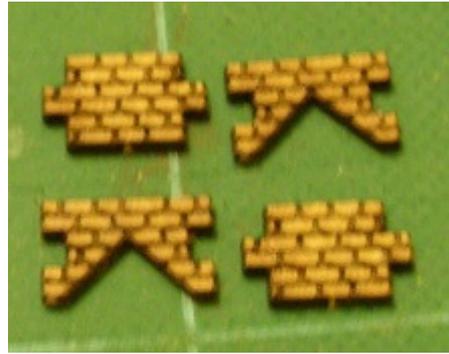

Remove the four chimney pieces from the sprue and glue together to form a square.



Remove the four sections of the storage box from the sprue and glue together as shown.



Finally, sit the roof in position and glue the 'A' frames to the top of each end wall. Do not glue these to the roof.