



Pig Pen and Sty (20mm and 28mm kits)

B20-EE-005 / B28-EE-005

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


These illustrations shown are of the 20mm version of this kit, but the steps required for the 28mm kit are identical.

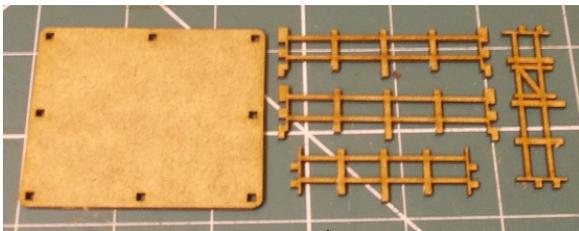

Start by removing the base of the pig pen and four fence sections from the sprue.

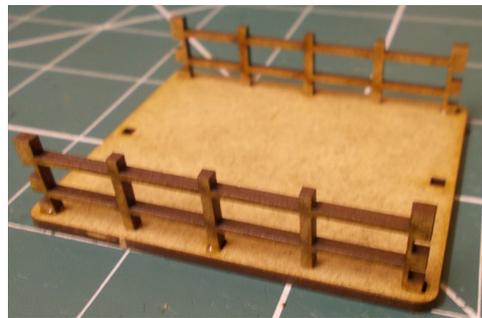

Glue the two long sections into position using the holes/lugs provided.

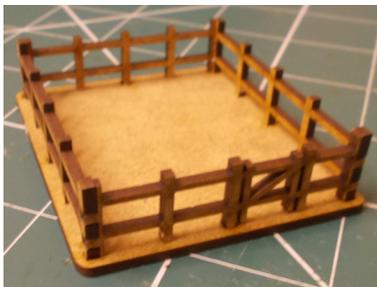

Then glue the short sides into place. Note the gateway should be to the right (as shown).



Take the outer fence sections from the sprue. Note the position of the horizontal bars and make sure they are all the right way up.




Glue the long sections into place so that the horizontal bars match those on the inner section of fence. The ends should align with the posts.


This piece should sit flush to the base.



Glue the short pieces into place (as shown), leaving a gap for the gate. These should sit flush to the base.

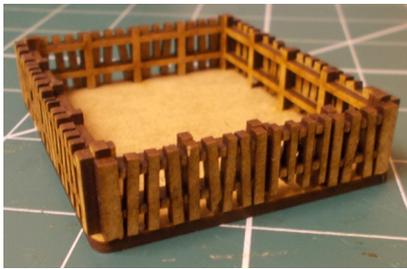

If desired add the outer section to the gate aligning the horizontal bars – this means there is a gap between the bottom of the gate and the base.

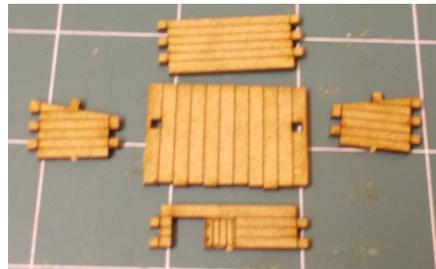

The sty is formed from the pieces shown above.



Turn the roof upside down and glue the end walls into place. The short end of the walls should be towards the ragged side of the roof.



Glue the front and back walls into place. (The 28mm version also has an optional door which can be used to cover the etched door to give a bit more depth)



The finished pig pen and sty. (20mm)



The finished pig pen and sty (28mm).