



BLOTZ

20mm Medieval Dwelling #1

B20-MD-001

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

You may find it easier to paint portions of this model **BEFORE** construction – please see the end of the document for info about this.

Ground Floor

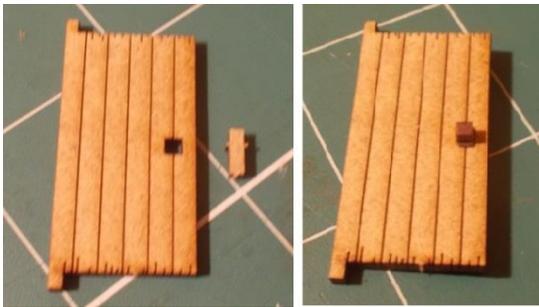

Remove the door and handle from the sprue and glue them together as shown.



Take the lower walls and floor from the sprue (as seen above).



Glue the walls to the base with all the etched detail facing inwards.



Take the four frameworks which correspond to your walls from the sprue.



Starting with the door framework, glue this into place aligning the door supports into their spaces. Note: This piece will be flush to the left hand side of the wall and extend out by about 3mm on the right.



Glue one of the door supports to the base of the doorway with the hole on the left (see pic)




Place the top support on top of the door and gently slide this into position as shown.



Then take the insert sections from the sprue and glue them into the spaces in the framework. Note the insert pieces for each wall are in their relative positions on the sprue.

Upper Floor

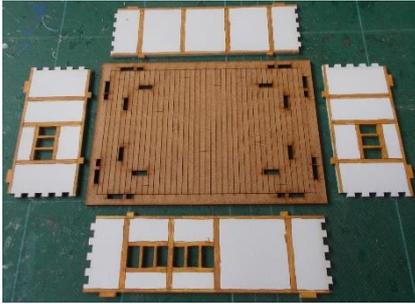

As with the lower floor, remove the floor and wall sections from the sprue.



Glue the walls into place.



Then take the outer frames...



..and glue these to the outside of the building.



Add the insert panels into each frame.


Roof



Take the two end pieces, the beam and one side of the roof from the sprue.



Place (do not glue) the side sections into the roof plate and glue the beam between them as shown.

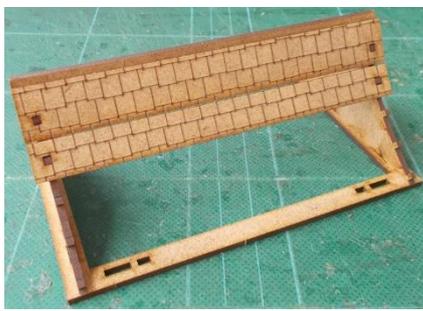


Starting from the top, start to attach the roof pieces.



They will form a gentle curve.




Repeat this with the other side of the roof.
Leave to dry.

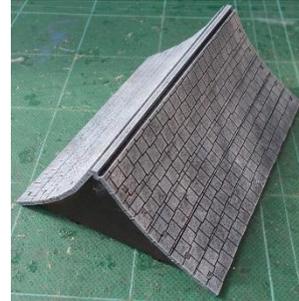


If you wish to paint your roof, we suggest you do that now. Remove the roof plate then follow the painting instructions (see later).



With the roof having been painted, glue the roof plate back into place.

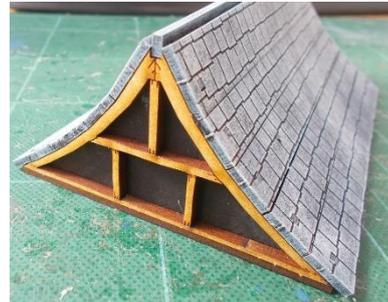

Glue the framework to each end of the roof.

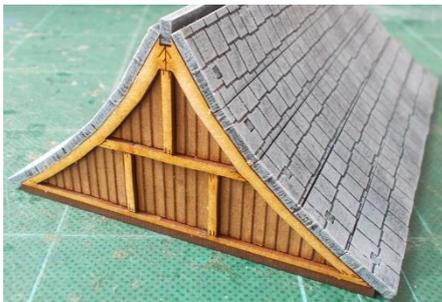

Add the insert sections to the framework.

Painting

It is much easier to paint sections of this building prior to assembly.

For the inner walls we removed these from the sprue and then sprayed them white with a standard car undercoat spray paint.

Once dry we then painted over the etched woodwork with a pale brown colour.



The outer frames remained unpainted.

The insert panels were all left on the sprue and painted with a standard DIY store oak colour wood stain.

The same colour was used for the door once the handle had been glued into place.



The roof was partially assembled – tile pieces glued to the end sections – before spraying the entire roof with a dark blue undercoat spray (e.g. Army Painter), then once that had dried dry-brushing the whole roof with a medium grey followed by a pale grey colour (both DIY household emulsion paint)

