



# 20mm Middle Eastern Building #1


## B20-ME-001

Please read these instructions fully before starting construction.  
PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

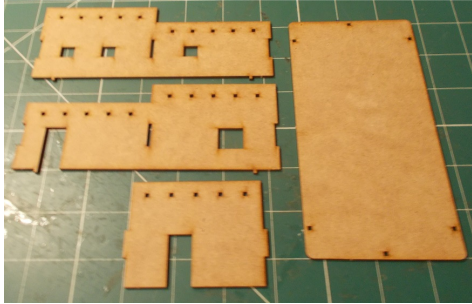


Remove the front, back and centre walls from the sprue along with the base.

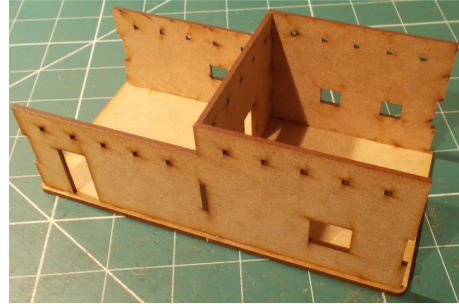


Glue the walls together to form an "H" shape (as shown above) then glue them to the base.

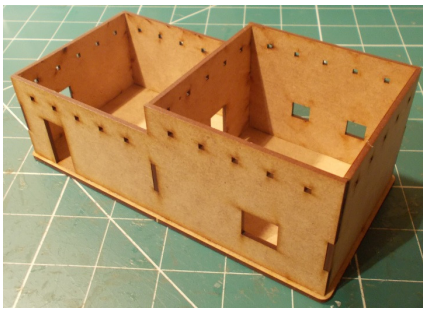


Attach the two side walls.

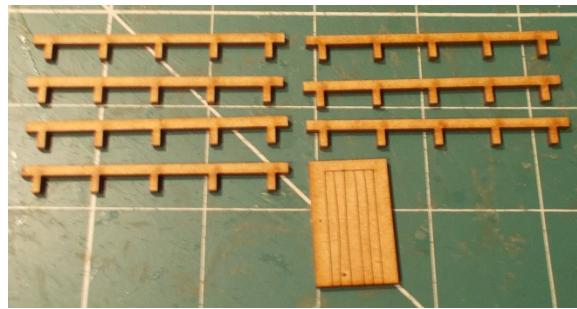


Take the roof supports and door from the sprue.

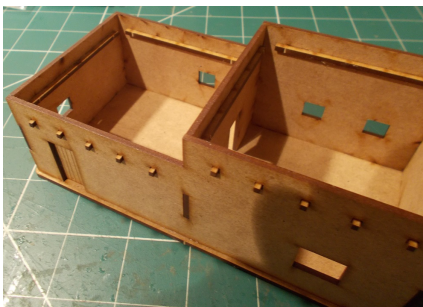

Glue the door behind the opening and attach the roof supports as shown above.

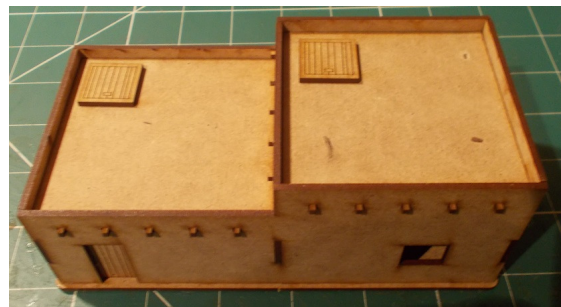

Glue the trapdoors to the roof pieces, then place (do not glue) the roof pieces on top of the roof supports.

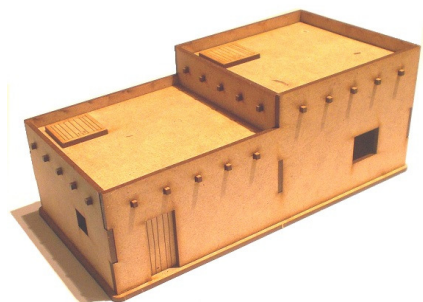

The finished building.