




20mm Middle Eastern Building #3 B20-ME-003

Please read these instructions fully before starting construction.
PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

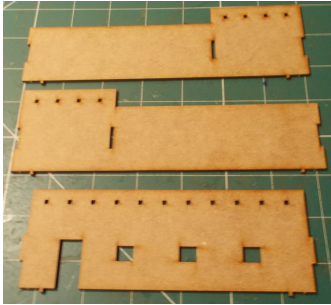


Remove the two side walls and the front wall of the building from the sprue.

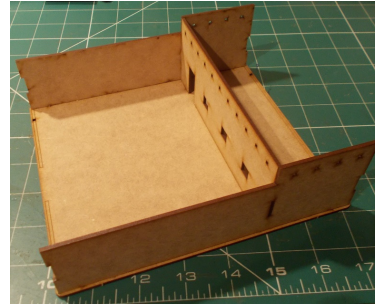


Glue them together to form an "H" shape (as shown above) then attach them to the base using the guide lines provided.

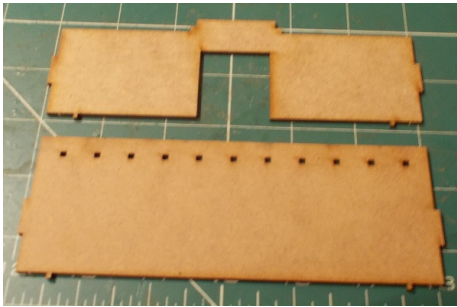

Take the rear wall and gateway from the sprue.

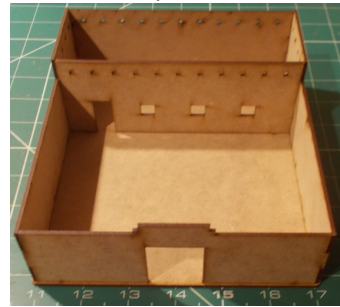

Glue them into position as shown.

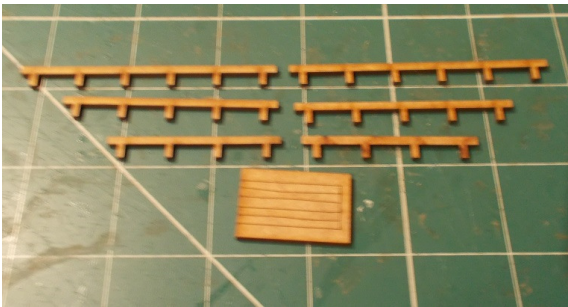

Take the roof supports and door from the sprue.



Glue the door behind the opening then attach the roof supports and shown.



Glue the trapdoor to the roof piece, then place (do not glue) the roof on top of the supports.



Glue the gateway pieces into position.