



15mm / 20mm Middle Eastern Building #7

B15-ME-007 / B20-ME-007


Please read these instructions fully before starting construction.
PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

The instructions show the 15mm kit, but the 20mm kit follows the same steps.

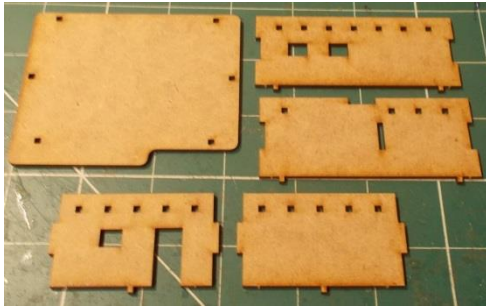


Remove the four walls of the building and the base from the sprue.




Glue the four walls together as shown above and attach them to the base.




Remove the three sets of steps, the side and end wall from the sprue.

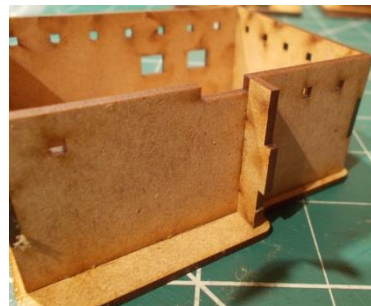

Glue the end wall into place as shown.

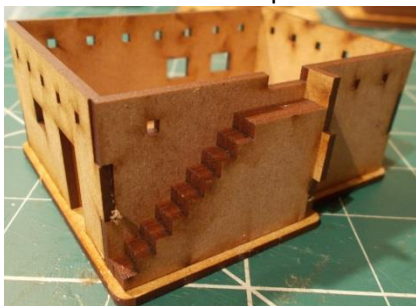

Attach the three sets of steps so they form the staircase.

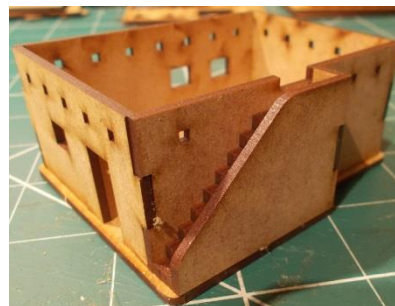

Glue the side wall into place.




Remove the four roof supports and the door from the sprue.



Glue the door behind the opening and attach the supports by pushing the lugs through the holes in the walls so that they stick out as shown above.



Glue the trapdoor to the roof and place (do not glue) the roof on top of the roof supports.

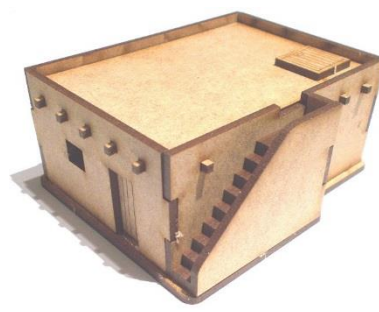

The finished building.