




20mm Middle Eastern Building #9 B20-ME-009

Please read these instructions fully before starting construction.
PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

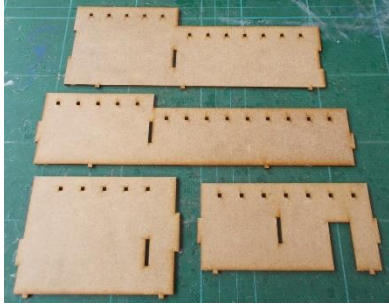


Remove the four walls shown above from the sprue.

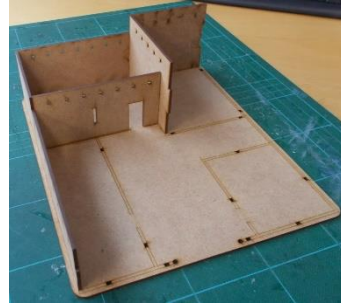


Glue them together as shown and attach them to the base.

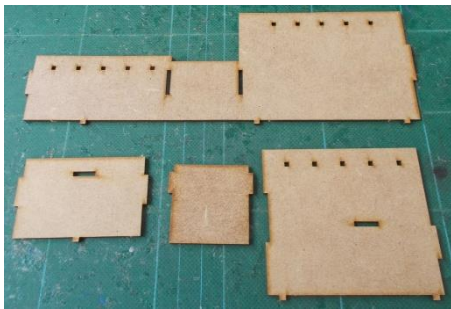


Take the opposite side wall (top) and the other two walls and shelter roof from the sprue.

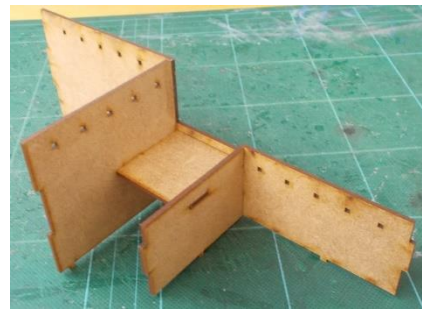


Attach the two walls and shelter roof together as shown, then glue these to the side wall.

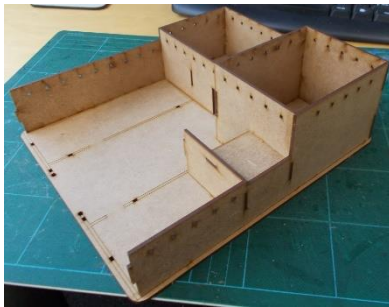


Glue this sub-assembly to the base as shown above.

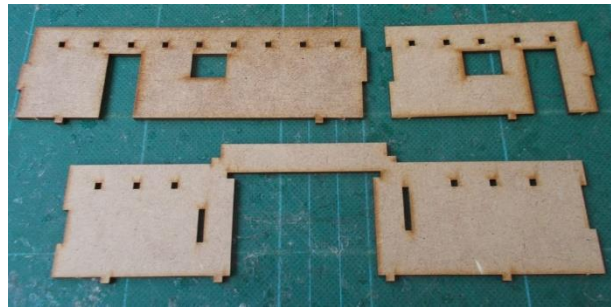

Take the final three walls.

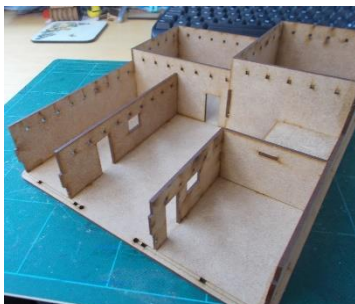


Attach the two inner walls to the base.

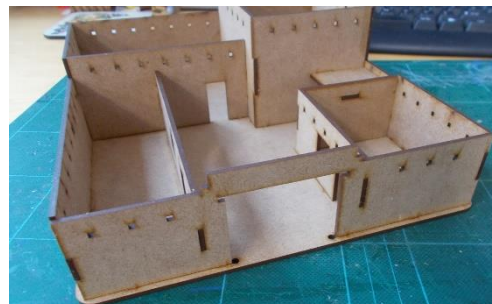

Then add the front wall.



Take the gates and top bar...

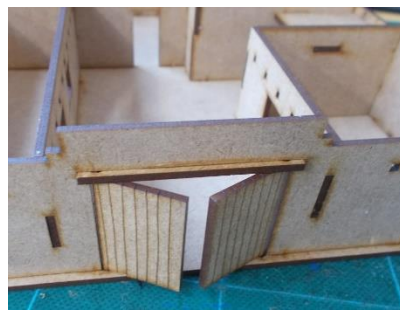

And place (do not glue) the gates in the holes provided. Slide (and glue) the top bar into the gateway.



Glue the extra gateway pieces to the front and back of the gateway.




Take the doors and roof supports from the sprue.



Glue the doors behind the openings and attach the roof supports as shown above.



Glue the trapdoors to the roof pieces, then place (do not glue) the roof pieces on top of the roof supports.

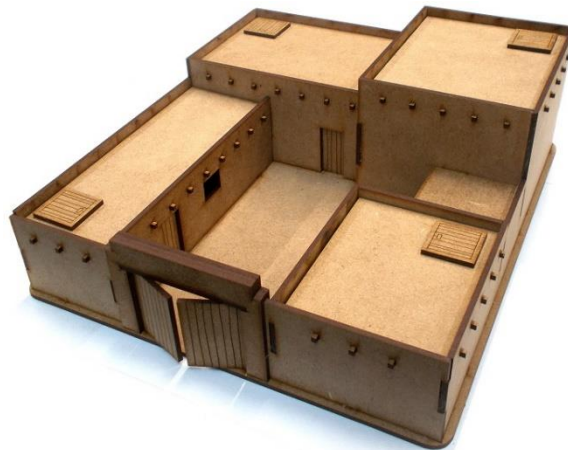

The finished model.