



## 20mm 3 Bay Coal Bunker #2

OO Gauge (4mm)

B20-RW-002

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Remove the back wall and bay dividers from the sprue.

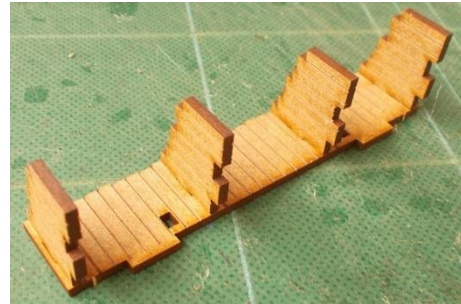

Glue the dividers to the back wall as shown above.



Attach the base.



Take the sign board and its supports.



Glue the supports to the back of the sign board.



Glue the supports to the back of the bunker.



The finished item.

Once constructed, we sprayed our model with a matt black car undercoat aerosol, then applied a heavy drybrush of a dark brown emulsion.

After that had dried we applied a lighter drybrush of a milk chocolate colour, then followed this by a very light dry-brush of a cream emulsion.

The sign board was painted with white emulsion before the sign was applied.  
(Please see the separate PDF for the sign boards.)

Finally the model coal was added.

All our emulsion paints are DIY store colour-tester pots.