

## 20mm Waterwheel B20-ST-101

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

## Waterwheel (B20-ST-101)

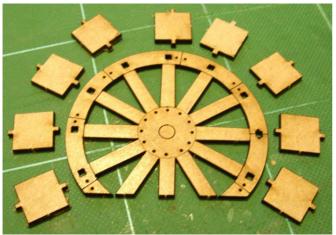

Remove the one of the sides and all the paddles from the sprue.

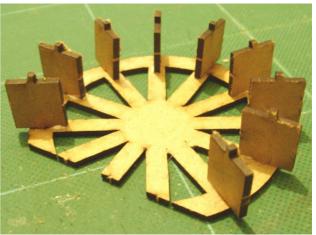

Turn the side over and glue the paddles into position as shown above.



Glue the other side into position and when the glue is dry, stand the water wheel up on its flat edge.