



BLOTZ

28mm Dark Age House #2

B28-DA-002


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

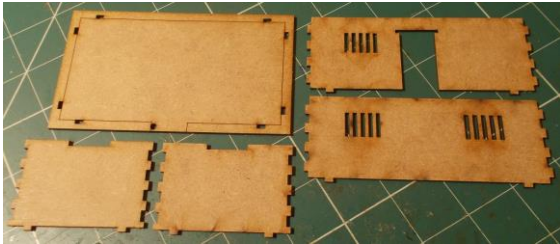

Remove the base and walls from the sprue.



Glue them together as shown above to form an open topped box. Note the position of the window to the left of the door.



Glue the handle to the door. Place the bottom lug of the door into the hole in the base, then place the door support on the top lug before gently pushing it into position within the doorway.



Glue the front framework into place, aligning it with the door and window.



Work round the building adding the other exterior frames.



Glue the panels into the spaces in the framework. Note: The panels are grouped on the sprue to make identifying them easier.



The roof is formed from the pieces shown above. There is a "T" on each roof piece which should be at the top



Glue the supports to one roof piece.



Then attach the other roof piece.



Glue the frames to each end of the roof.



Attach the panels into each frame.



The smoke hole cover is formed using these four pieces.



Glue them together as shown.



Attach the thatched roof (See separate guide) then glue the smoke hole cover into place.