

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

You may find it easier to paint portions of this model **BEFORE** construction – please see the end of the document for info about this.

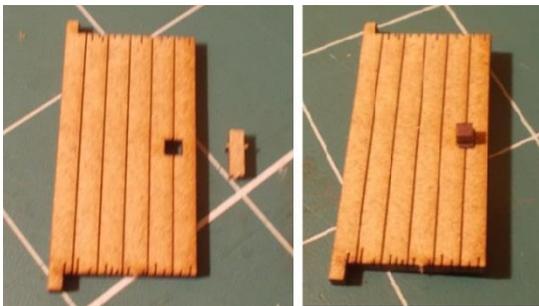

Remove the door and the handle from the sprue and glue them together as shown.

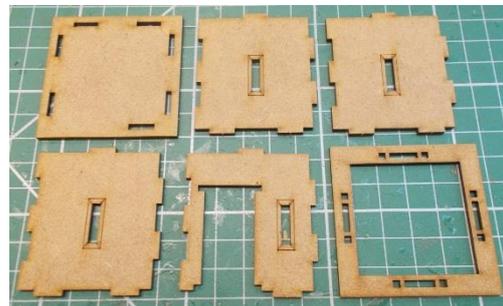


Take the wall sections, base and top plate shown above from the sprue.



Glue the walls to the base with all the etched detail facing **outwards**.



Attach the top plate.

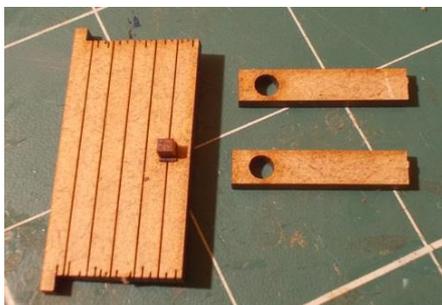

The door should have 2 door supports.



Glue the lower support into the gap at the bottom of the door.
Place the top support on top of the door and gently slide this into position.



Take the frames shown above. Starting with the doorway, glue the frames into position. They will align on the left and extend out by around 3mm on the right.



Now take the insert sections from the sprue and glue them within the framework. Note the insert pieces for each wall are in their relative positions on the sprue.



Work around the building, gluing each frame into position.



The completed lower section.

Roof




Take four of the roof supports from the sprue.



Glue them to the roof plate. To ensure they are aligned correctly, place the whole assembly on top of the lower portion of the toll booth (making sure not to glue the roof plate to the toll booth)



Add the other four supports.

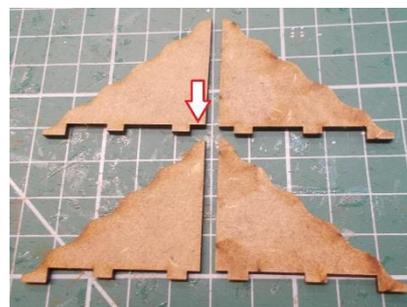

The corner pieces are two different sizes. There are two with a longer rear lip (see arrow in picture).



Take the two longer pieces and glue these into position as shown – they will touch in the centre of the roof plate.



Add the other two corner pieces.



Take the roof sections.



And glue them into position.



The completed model.

Painting



It is much easier to paint the insert sections of this building prior to assembly. These were painted while still on the sprue. Spray them black (car undercoat spray) then dry brush them with a couple of shades of grey.

The outer frames remained unpainted.

The roof was fully assembled before spraying being sprayed with a black car undercoat spray.

If slate, then drybrush with a dark grey colour, before dry-brushing with a lighter grey (DIY emulsion).

If pantile, then drybrush with a chocolate brown colour before dry-brushing with a red colour (DIY emulsion)

