



28mm Old West Upper #1

B28-OW-520


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

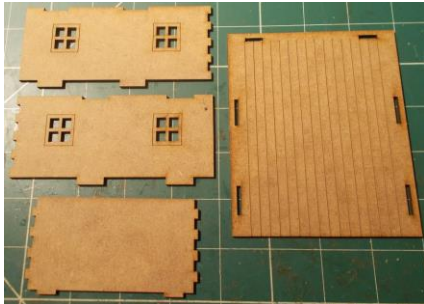

Remove the base piece and the inner walls from the sprue.



Glue the walls to the planked base so that all etched details are facing inwards (see pic).



Note: Four lugs will extend through the floor.



Take the frame pieces from the sprue.



Then add them as shown above.

The thinner part of the frame (with the sprue points on it) should be at the bottom.




The insert panels for the sides.



Glue these into place.



Add the inserts for the back wall.

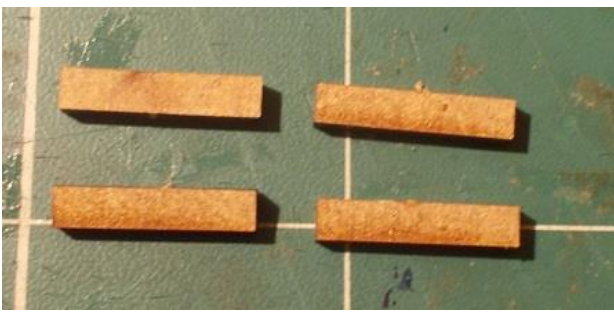

The window sills.



Glue a sill below each window.



The completed upper section.