



28mm Ruined Archway

B28-RU-011

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Remove the base, front and short wall from the sprue
(as shown above).

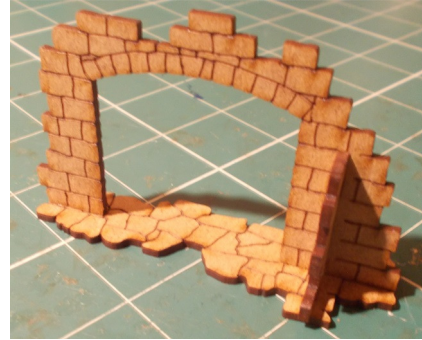

Attach the short wall to the front wall, then glue the
pair of them to the base as shown.



Glue the back wall into place, followed by the other
side of the short wall.