



## 28mm Dwarf Archway

**B28-RU-012**

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Remove the two short wall sections and front (shown above) from the sprue.



Glue the short sections back to back then insert their lug into the hole in the larger wall.




Glue the rear piece in place.



Add the base, aligning the lugs/holes.



Glue the external arch pieces into place, one on each side of the wall.

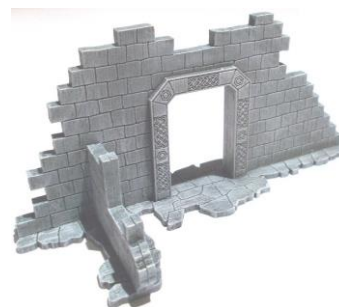

The finished archway.  
We sprayed ours black then drybrushed it with various shades of grey