



28mm Corner Right /Left (Short Building)

B28-SB-002 / B28-SB-003

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

The images used here are from the Right-hand Corner kit, but the Left-hand one is identical except that the pieces are reversed.

It is easier to paint some pieces of the kit before assemble – please see the end of the document for painting tips.

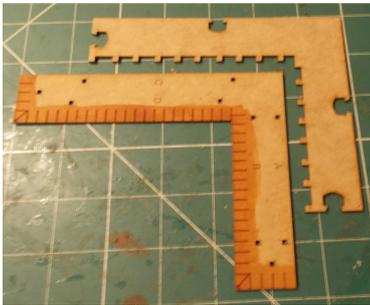

Take the base and floor sections from the sprue.

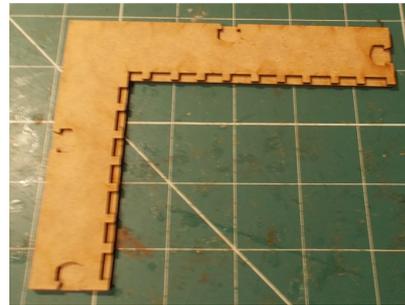

Glue the base underneath the floor.



Remove the inner wall pieces – Note these are marked A -> D.




Starting with "B", work around the building adding each wall in turn to its marked position on the base.



Starting with outer wall frame "D", attach this so it goes completely into the corner, then work around the building adding each frame in turn.

Then glue the inner panels into place.

Note – these are on the sprue as their wall order as each wall has different width panels.

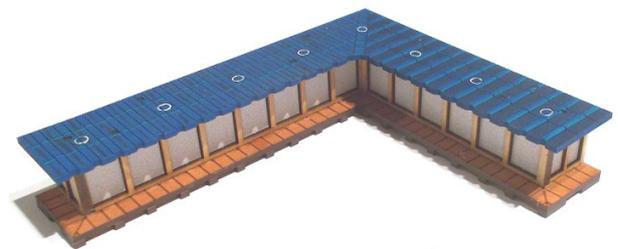

Glue the roof into place.

