



## 28mm Barricades

### B28-SF-225

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.




Take the base and centre board from the sprue.



Glue the centre board to the base as shown above.

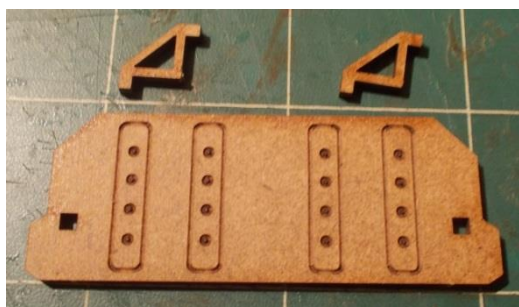

Take the back board and angle brackets...

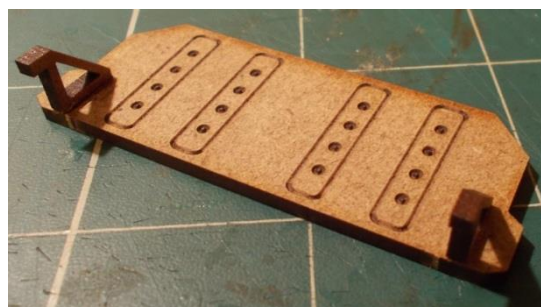

..and glue them into position (see pic).




Glue back plate to the centre board, using the holes to align the lugs on the angle brackets.



Take the front plate and centre piece from the sprue.



Attach them to the front of the model as shown.

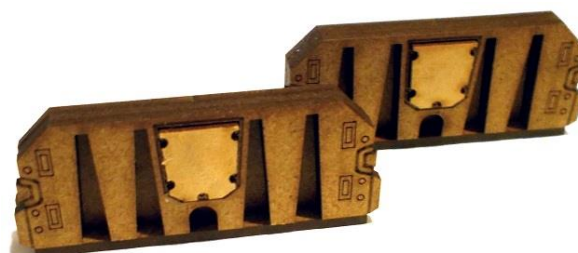

The finished barricades.