



28mm Walkway – Open

B28-SF-227

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.



Take the two pieces shown above from the sprue.



Glue the one on the left to the **back** of the one on the right.



Take the barricade section...



..and glue it into position (see pic).



Take the walkway and support brackets from the sprue.



Glue the walkway into place, then add the brackets, attaching the "higher" end to the lugs.




Take the rear piece.



Glue this into place with the etched detail facing into the model. Attach the "lower" end of the brackets to the lugs.




Glue the model to the base.

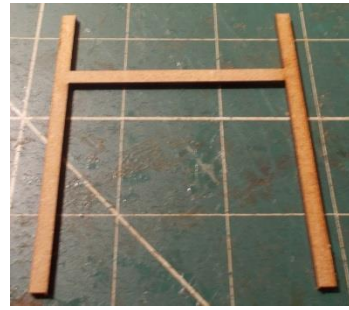

Take the "H" piece.



Glue it to the rear section as shown above.

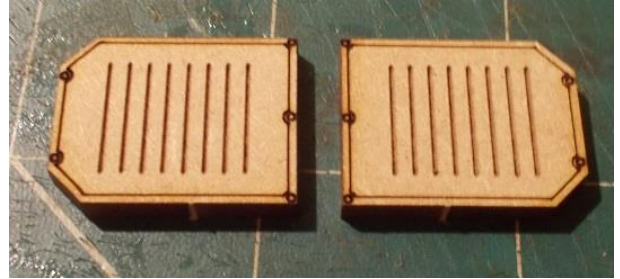

Take the armour plates.



Glue them into position.



The finished walkway section.