



BLOTZ

28mm Sci-Fi Walls – Damaged Wall #3

B28-SFW-007


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

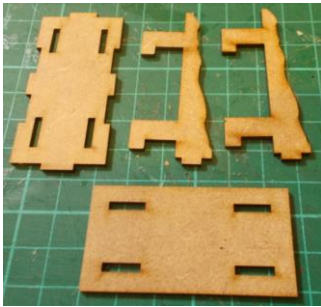

The end of the wall is formed from the pieces shown above.

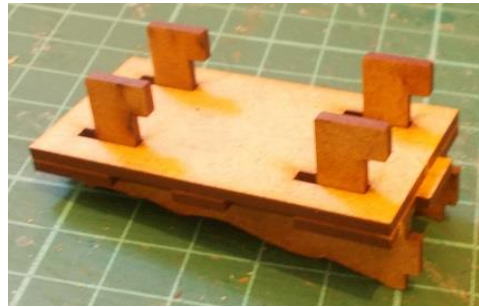

Glue the two hooked pieces through the back plate, ensuring the hooks all point in the same direction, then add the outer layer.



Glue the end to the base.



Add the side walls.



Then glue the "lid" into position.



Take the contour sections and glue these into position.



The completed wall section.