



# 28mm Sci-Fi Walls – Damaged Wall Pack

## B28-SFW-005 / 006 / 007

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

### B28-SFW-005 – Damaged Wall #1 (65mm)




Each end of the wall is formed from the pieces shown above.




Glue the two hooked pieces through the back plate, ensuring the hooks all point in the same direction.



Add the outer layer.

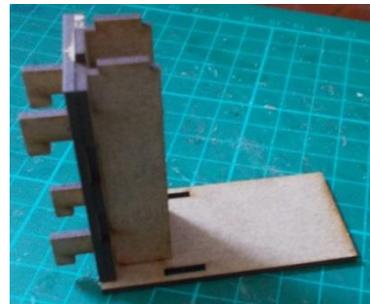

Glue the end to the base.  
The base is the longer of the two pieces.

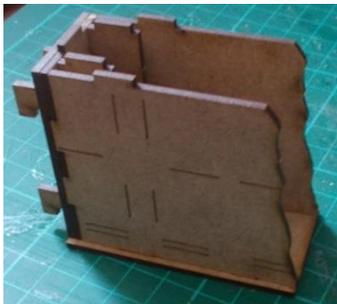

Add the side walls.



Take the contour sections and glue 3 or 4 together ensuring the notches align.



Glue the brace pieces into the notches. Then continue to add the contour pieces.



Add the "lid".

Glue the contour piece into place as shown above.



Attach the outer wall decoration.



If you want a flat end rather than a hooked one, use the two pieces shown above in place of the hooked end section.



The completed wall.

### **B28-SFW-006 – Damaged Wall #2 (45mm)**



Each end of the wall is formed from the pieces shown above.



Glue the two hooked pieces through the back plate, ensuring the hooks all point in the same direction.



Add the outer layer.




Glue the end to the base.  
The base is the longer of the two pieces.



Add the side walls.



Take the contour sections and glue 3 or 4 together ensuring the notches align.

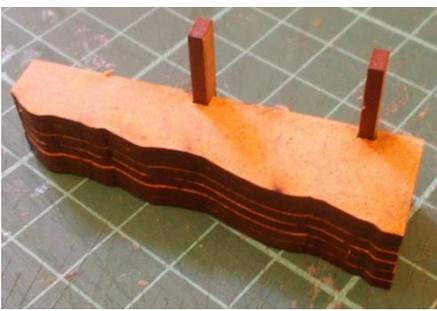


Glue the brace pieces into the notches. Then continue to add the contour pieces.



Glue the contour piece into place as shown above.



Add the "lid" and outer wall decoration.

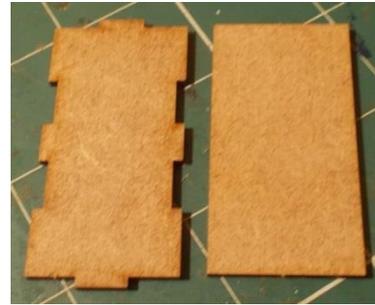

If you want a flat end rather than a hooked one, use the two pieces shown above in place of the hooked end section.




The completed wall.

**B28-SFW-007 – Damaged Wall #3 (15mm)**



The end of the wall is formed from the pieces shown above.

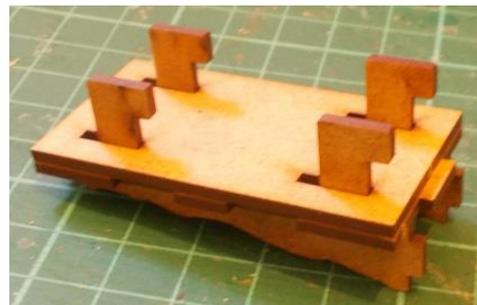

Glue the two hooked pieces through the back plate, ensuring the hooks all point in the same direction, then add the outer layer.



Glue the end to the base.



Add the side walls.



Then glue the "lid" into position.



Take the contour sections and glue these into position.



The completed wall section.