



Victorian Ironwork (20mm / 28mm kits)

B20-WF-103 / B28-WF-105

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.


A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

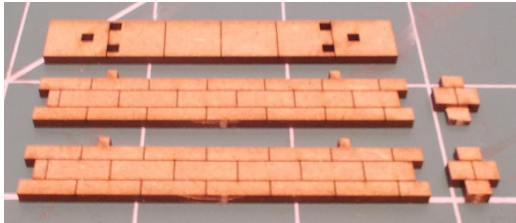


The base of each wall is formed from the pieces shown above.

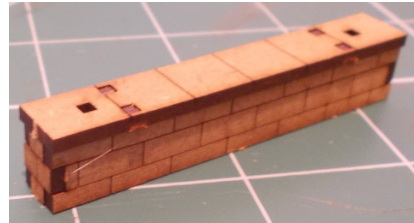


Glue the two long brickwork sections to the long coping stones piece using the holes/lugs provided. Then glue the two small cross-shaped pieces into the two ends.

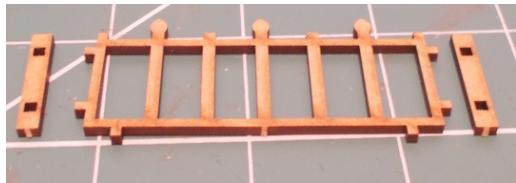


For the railings, remove the large central section and the two end pieces from the sprue.

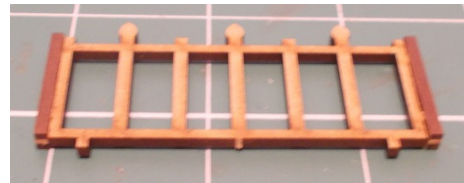


Glue the end pieces to the railings as shown.

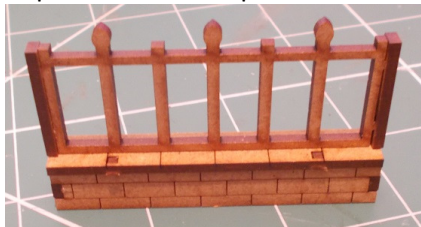

Then attach the railings to the base section.

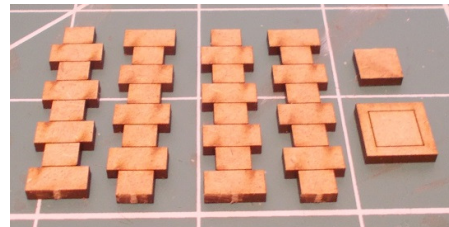


Each pillar is formed from thr four long sections and two cap-stones shown.

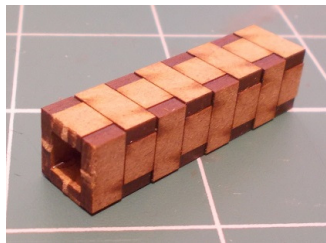

Glue the side pieces together so that they form a hollow tube.



Then stick the two cap-stones on one end so that they overhang evenly all round.

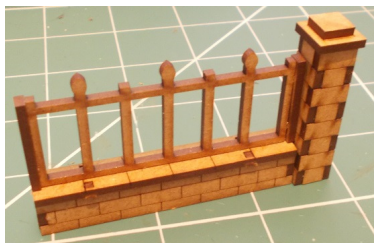

Finally glue the pillar to one end of the railings as shown.