


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

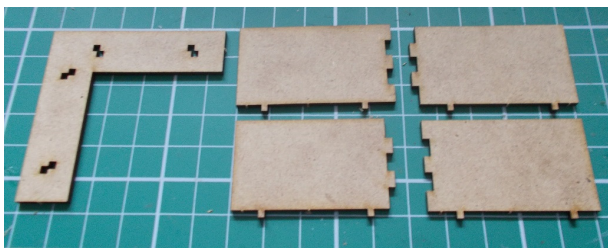


Take the base and four wall sections from the sprue.

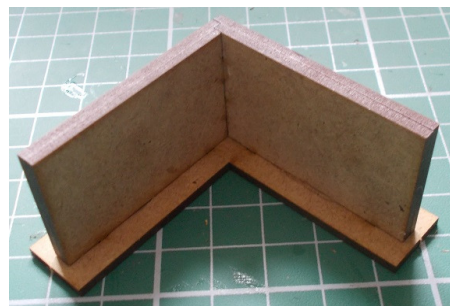

Glue the walls back to back and attach to the base so that there is a 2mm gap at either end (see pic).

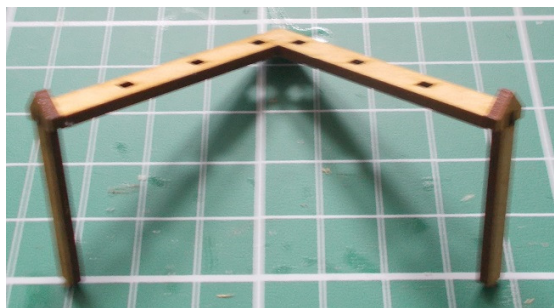

Glue the two uprights and cross-piece together as shown.

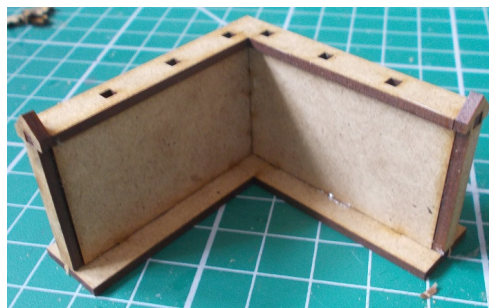


Glue these to the wall so the uprights are flush with the walls.

Painting

The wall was sprayed white using car undercoat


The roof was sprayed red using car undercoat then a light black ink wash applied.

The stone was sprayed grey using car undercoat then a light black ink wash applied.

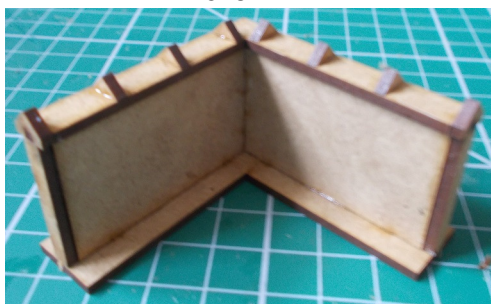

Glue the triangular supports in place.

Before going any further it is easiest if you paint the components now.

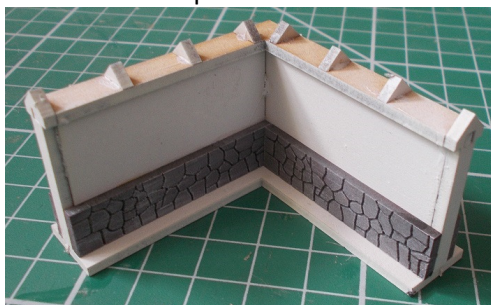

Glue the stonework into position.



Then add the roof, starting with the two inner pieces.