

28mm Ruins #4

B28-RU-004

BLOTZ

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk


Ruins #4 (B28-RU-004)

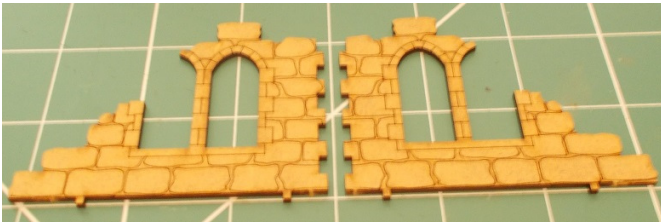

Remove the two long wall sections from the sprue and glue them together back to back so the edges of the stonework line up.



You will end up with the two walls as shown above. Note the lugs on the bottom do not line up.

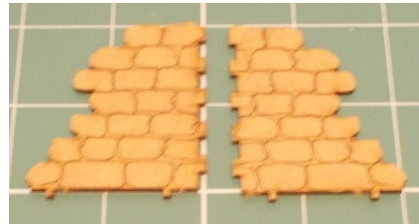

Do the same with the two short wall sections.



Glue the walls together and slot them into the base.