



28mm Ruins #5

B28-RU-005

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk


Ruins #5 (B28-RU-005)

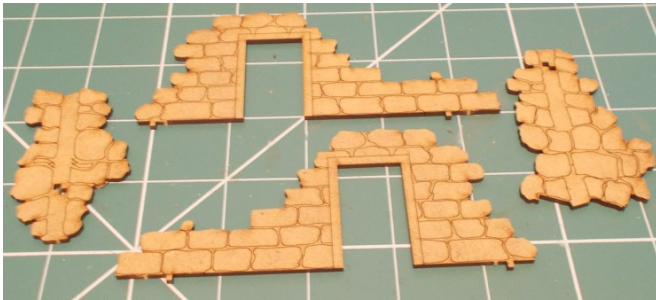


Remove the two long wall sections and two base sections from the sprue.



Glue the wall sections back to back so that the stonework lines up.

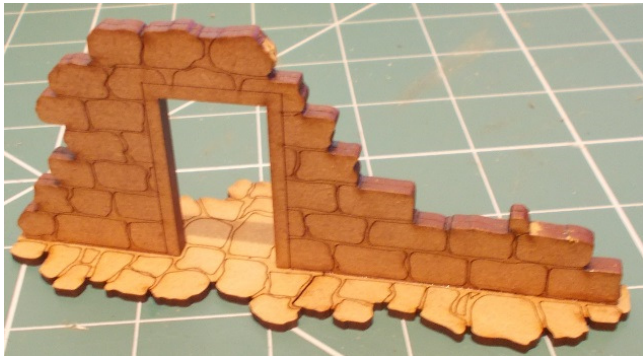

Attach the wall to the base sections as shown above.

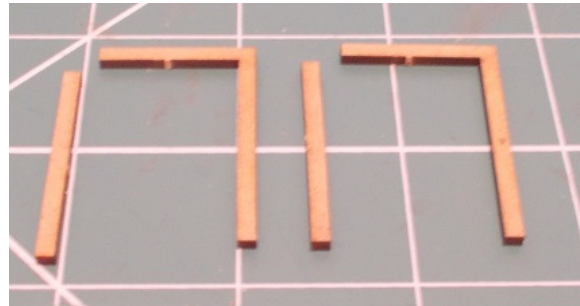

Remove the door frames from the sprue.



Glue a doorframe onto each side of the wall.