

28mm Ruins #6

B28-RU-006

BLOTZ

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk


Ruins #6 (B28-RU-006)

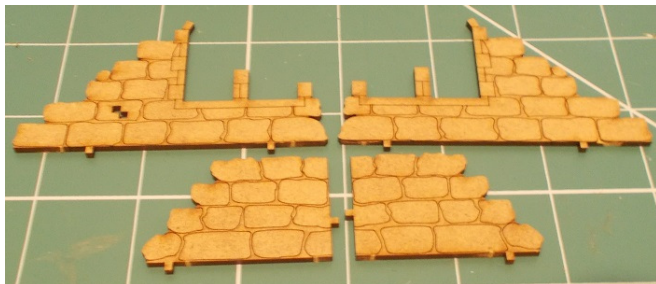


Remove the two long walls and two short walls from the sprue...

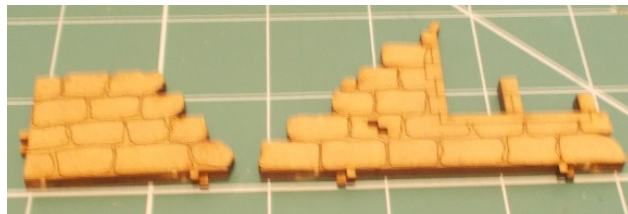

... and glue each pair together back to back so the edges of the stonework line up.

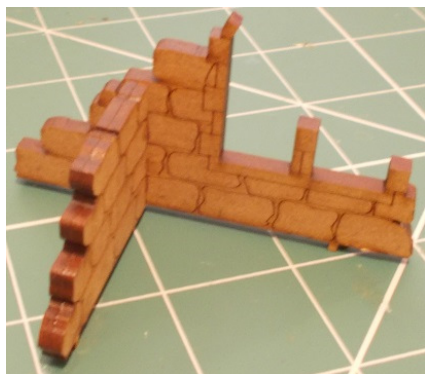

Using the holes / lugs provided attach the short wall to the long wall as shown above.

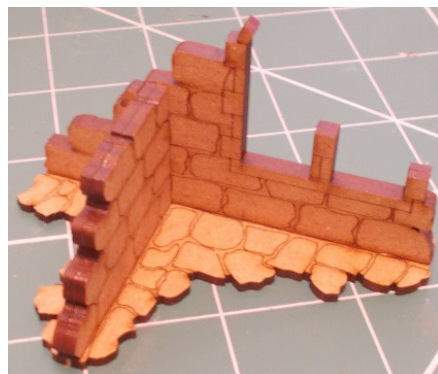

Glue the walls to the base.