



28mm Starship Corridor (6" long)

B28-STA-100

Please read these instructions fully before starting construction.


PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

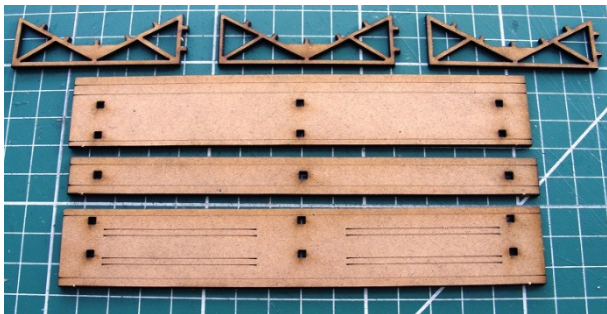

Each of the corridor walls is formed from a set of the pieces shown above.




Apply a little glue to the supports and attach the pieces as shown above. Note the two lugs on each support should be at the **bottom** of the wall (i.e. the section with the four sets of horizontal lines marked on it. Leave to dry.

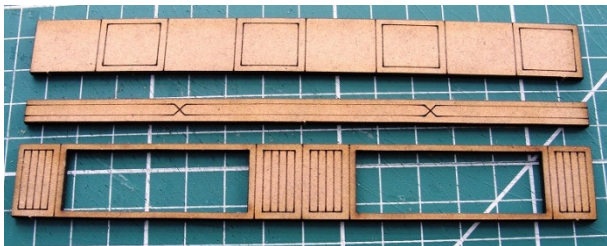

Once the wall is dry, remove the pieces shown above from the sprue.



Glue these into position on the wall (NB: There are lines inscribed on the wall to help you position these). Leave to dry. Ensure the decorative pieces do not extend over the ends of the wall as this will make linking corridor sections together quite tricky.

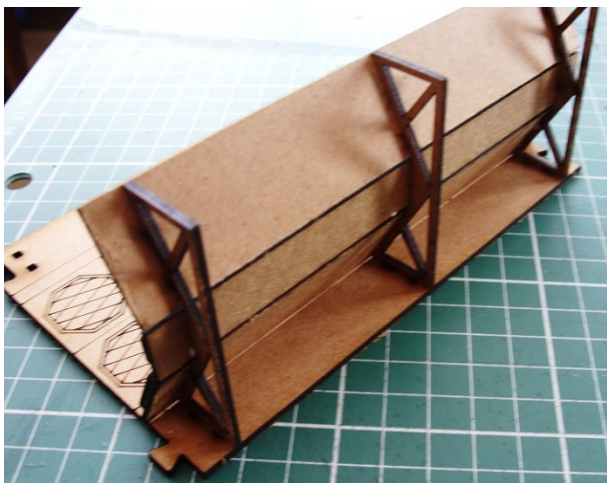

Apply a little glue to the bottom the wall and the supports. Position the wall onto the base using the holes provided.



Repeat this with the other wall section.