



28mm Phone Box #1

B28-ST-124


Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

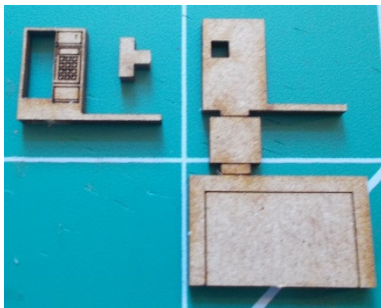

The phone part of the box is formed from the three pieces shown above.



Glue the "handset" into place on the back panel, then glue the keypad into place as shown.

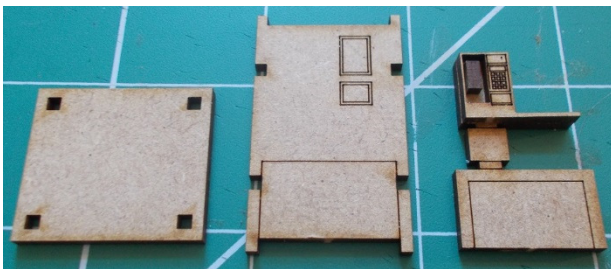

Remove the base and rear wall from the sprue.




Glue the rear wall to the base, then glue the phone in front of it. Align the phone using the guide lines etched into the rear wall.



Glue the side walls into place – note the one on the left has notches cut out of it..



Attach the roof.

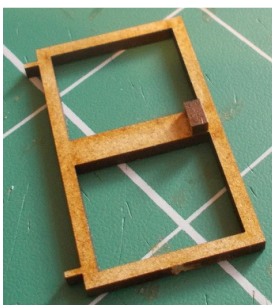

Glue the handle to the door.



The finished phone box.