



28mm WWII Hospital Hut

B28-WW2-102

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.

Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.

During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.


A full-colour copy of these instructions can be found on our website: www.blotz.co.uk




Remove the four walls and all the windowsill pieces from the sprue.



Glue the windowsills into position so that they are flush with the back of the wall and extend outwards slightly at the front (as shown).

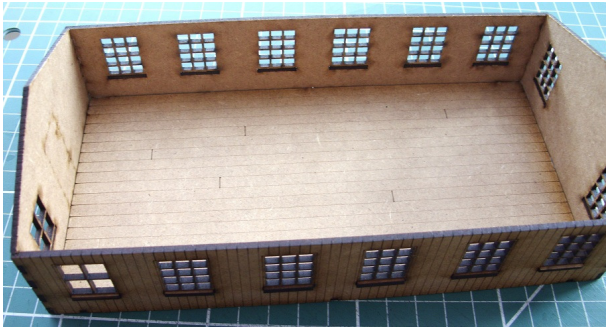

Glue the four walls into position around the floor, aligning the lugs on the floor with the holes in the base of each wall.

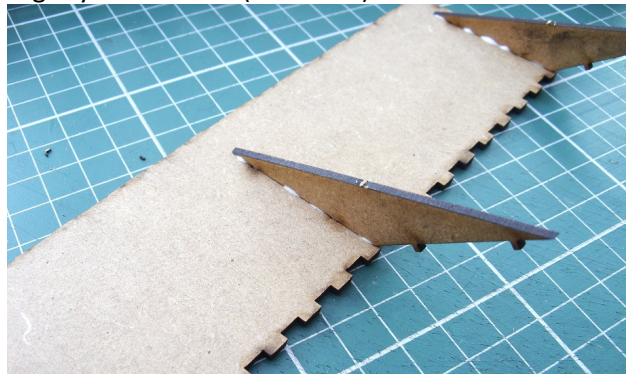

Glue the roof supports to the underside of one piece of the roof. Allow to dry, then glue the other half of the roof into position.



Sit the roof on top of the building.