



Type 24 Pillbox

B28-WW2-201 / B20-ST-203

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: www.blotz.co.uk

Type 24 Pillbox

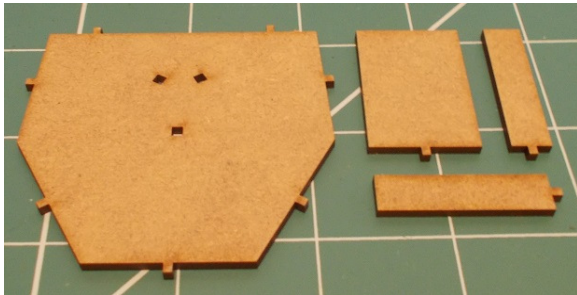


Remove the base piece and blast wall sections from the sprue.

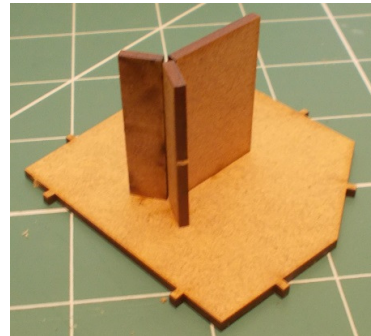

Glue the blast wall to the base as shown.



Remove the long wall and the two wall sections marked "L" and "R" from the sprue. Mark the back of "L" and "R" so you know which is which. The letters refer to "Left" and "Right" as you are facing the long wall.

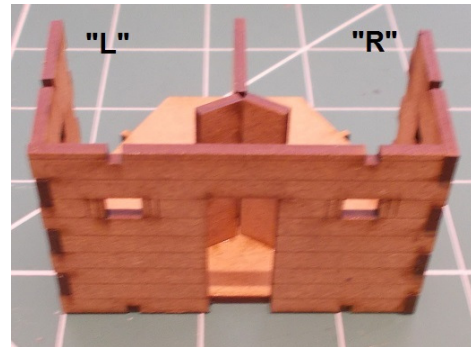

Glue these walls to the base as shown.



Glue the roof in place.



Then attach the three walls marked "F".